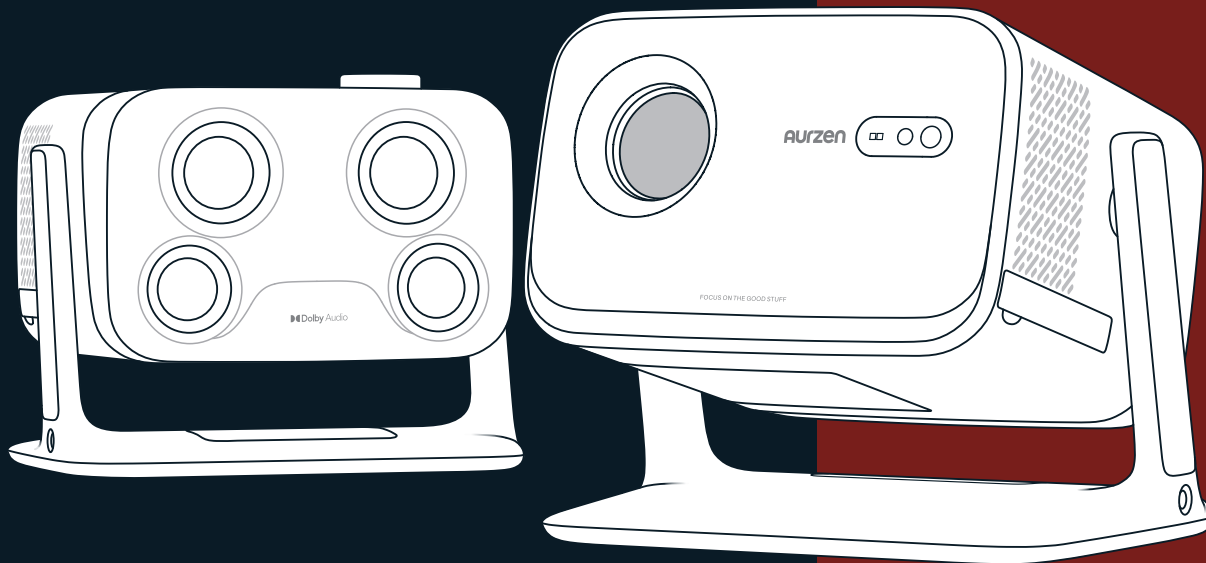 


Aurzen

 **Google TV**



 **BOOM** mini USER MANUAL

ENGLISH ▶



Tutorial Videos



AurzenHub App

Download the AurzenHub app to easily control your Aurzen projector and unlock amazing features.

CONTENTS

TROUBLESHOOTING GUIDE	01
READ BEFORE USE	02
IN THE BOX	03
PRODUCT OVERVIEW	03
Projector	03
Remote Control	04
QUICK START	05
1. Projector Installation	05
2. Power On/Off	06
3. Remote Control Pairing	06
4. Setup Wizard	07
5. Image Adjustment	07
PROJECTOR CONNECTION AND INPUT SOURCE	10
WIFI CONNECTION	10
GOOGLE ASSISTANT	11
GOOGLE CAST™	11
BT SPEAKER MODE	12
MORE SETTINGS	13
PROJECTION DISTANCE AND SIZE	14
SPECIFICATION	14

TROUBLESHOOTING GUIDE

1. The copyrighted content from Hulu, Netflix, and similar services can not be mirrored or cast.

- * This projector offers a range of pre-installed streaming apps that are officially licensed. You can go to the **homepage > Apps**, search for the app, and log in to your account to play the content. For casting, refer to the "Google Cast" section.

2. Fuzzy Image

- * Adjust the focus or keystone correction of the projector.
- * Make sure the projection distance is in the effective focal range of the projector.
- * Remove the dust or dirt from the lens with a blower or soft-bristled brush.

3. Non-rectangular Image

- * Place the projector perpendicular to the screen/wall if keystone correction function is not used.
- * Use the keystone correction function to adjust image shape.

4. Automatic keystone correction failure

- * Make sure the adjustment sensors on the front of the projector is not blocked or smudged.
- * Move the projector until it is perpendicular to the projection surface and try again.


5. Autofocus failure

- * Make sure the adjustment sensors on the front of the projector is not blocked or smudged.
- * Move the projector back and forth until the projector is in recommended projection distance.

6. Remote control unresponsive

- * Make sure the batteries are installed correctly and not drained.
- * Remove any obstructions between your projector and remote control.
- * Ensure the remote control is successfully paired with projector via BT.
- * Make sure no button is pressed or stuck and check if the power indicator is still on. If yes, please contact customer support or local service center.

7. Connect the BT devices

* Go to **Homepage** > **Dashboard**  > **All settings**  > **Remotes & Accessories** to check the BT device list, and connect the device.

8. Power adapter getting warm

* It's normal for the power adapter to generate heat during use. It's been tested and meets safety standards. Rest assured.

9. Others

* Please feel free to contact us at support@aurzen.com.

READ BEFORE USE

Please read the Product Instructions carefully:

Thank you for purchasing and using this product.

For your safety and interests, please read the Product Instructions carefully before using the product.

About the Product Instructions:

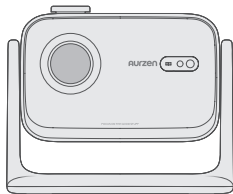 
The trademarks and names mentioned in the Product Instructions are the property of their respective owners.

All Product Instructions shown are for illustration purposes only. The actual product may vary due to product enhancements.

We shall not be liable for any personal injury, property damage, or other damages caused by the failure of the user to comply with the Product Instructions or precautions.

Aurzen reserves the right to interpret and modify the Product Instructions.


IN THE BOX




Projector



 Remote
(Batteries Not Included)





Power Adapter


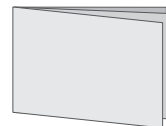 


User Manual


PROJECTOR OVERVIEW

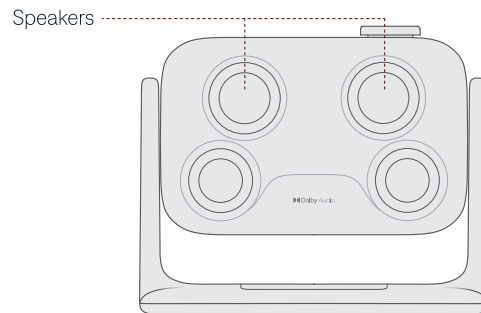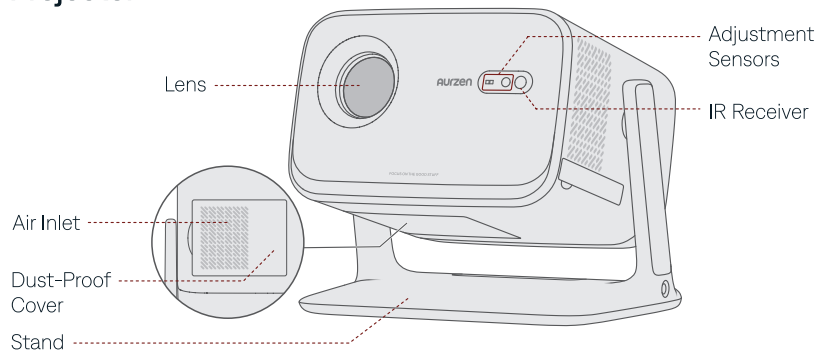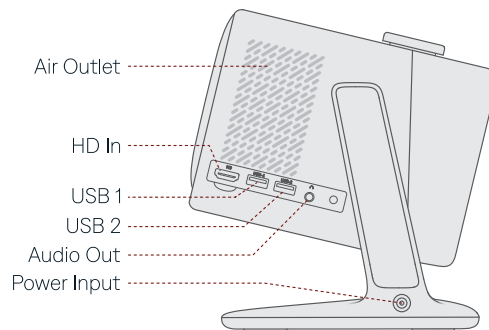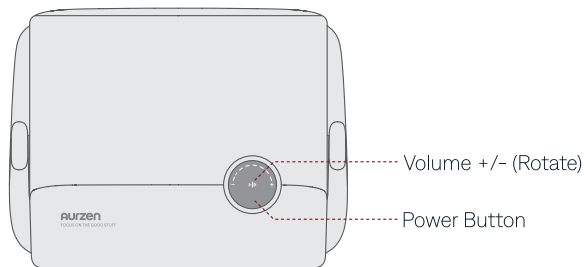    Projector





Remote Control

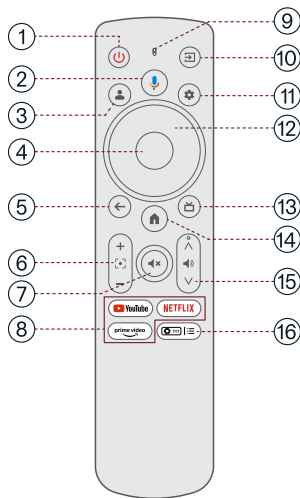 

- ① **Power**
Press to power on/switch to standby mode/
wake up/press and hold for 3s to power off
- ② **Google Assistant**
Press and hold and talk
- ③ **User Profile**
Press to see profile page
- ④ **OK**
Confirm a selection/pause/resume
- ⑤ **Back**
Return to previous page
- ⑥ **Focus Adjustment**
- ⑦ **Mute**
- ⑧ **Streaming Apps**
Jump to video streaming pages
- ⑨ **Indicator Light**
- ⑩ **Input Source**
Press to choose from input sources
- ⑪ **Settings**
Press to access dashboard
- ⑫ **Navigation**
Control cursor on the screen
- ⑬ **HD Quick Switch**
Press to switch directly to the HD input signal
- ⑭ **Home**
Access homepage

⑮ Volume +/-

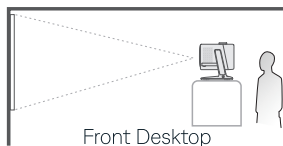 
⑯ Projector Setting (Shortcut)

Access projector setting shortcut menu


* Please install 2 AAA batteries (not included) into the remote control before use.

QUICK START

1. Projector Installation




Front Desktop

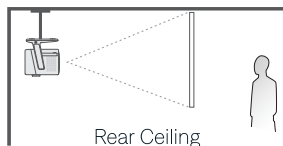 

Rear Ceiling



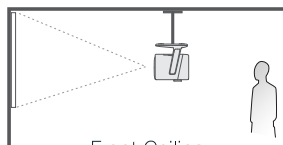 

Rear Desktop



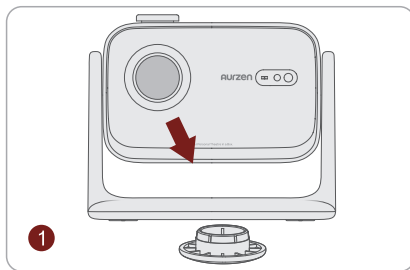 
Front Ceiling

Notes:


* Please select the correct projection mode during the setup wizard. Or you can go to **Homepage > Dashboard**  > **All settings**  > **Projector > Projection Mode** to select the corresponding projection mode, so the images can be projected correctly.

* Mounting Screw: 1/4" (not included)


2. Power On/Off



Take off the lens cover.

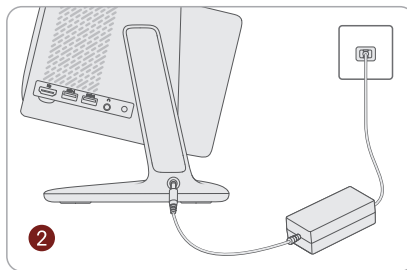 

Connect the power adapter to an outlet.

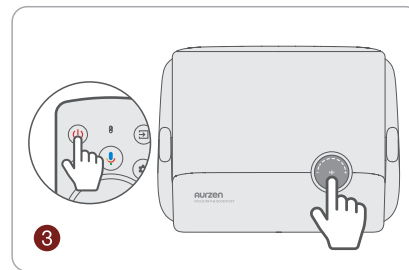 




Press the **Power Button** to turn on the projector; press and hold the **Power Button** and then press the **OK** button to turn off the projector.

Notes:

- * When the projector is on, press the power button once to put it into standby mode; press it again to wake it up.
- * Please use the power adapter provided in the box to prevent product damage.

3. Remote Control Pairing

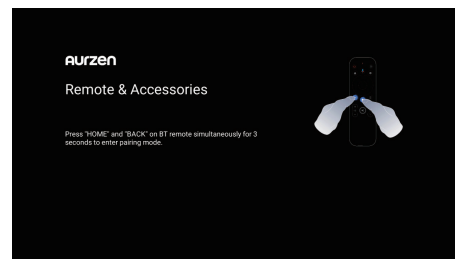 Turn on the projector and wait for the pairing prompt on the screen. Bring the remote control within 0.33 ft/10 cm of the projector, then simultaneously press and hold the  and  buttons. Wait for the pairing to complete.



Remote Indicator Light Status

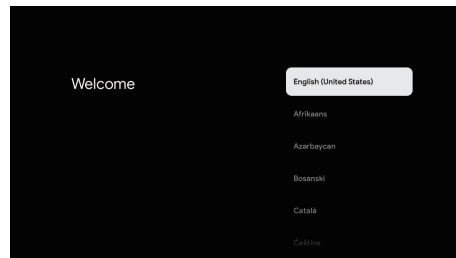 
Not paired: Solid red

Pairing: Flashing blue

Paired: Solid blue

4. Setup Wizard

Follow the setup wizard to select the projection mode, choose your preferred language, select the correct region, and sign in with your Google Account or set up basic TV.




5. Image Adjustment

Focus

1. Auto Focus

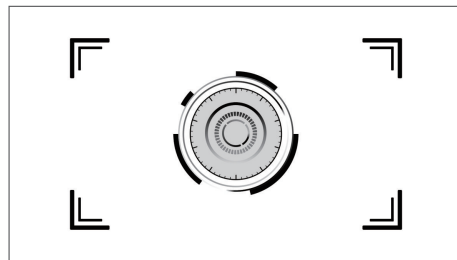 When the projector detects shaking/rapid movement, it will automatically adjust the image quality.



Tip:

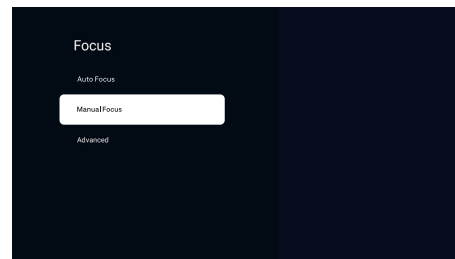 
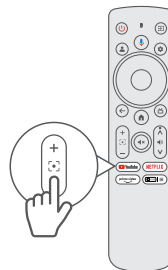 
Go to **Homepage > Dashboard** ⚙️ > **All settings** ⚙️ > **Projector > Focus > Advanced**, you can also enable:

Auto Focus On Startup, allowing the projector to automatically adjust the focus upon powering on.

Auto Focus On Deep, allowing the projector to automatically adjust the focus without displaying the adjustment image and ensuring a seamless viewing experience.

2. Electric/Manual Focus


You can also press the **Focus** buttons on the remote or go to **Homepage > Dashboard** ⚙️ > **All settings** ⚙️ > **Projector > Focus > Manual Focus** to sharpen the image focus until the blurry image becomes clear.



Keystone Correction


1. Auto Keystone Correction

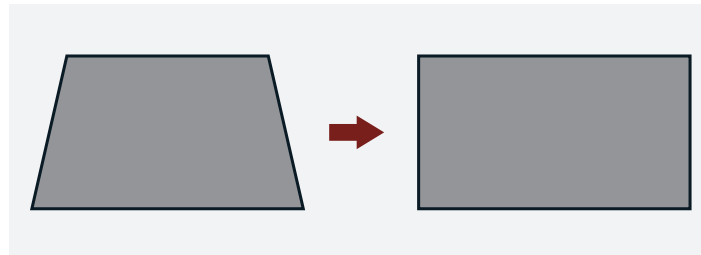 When the projector detects shaking/rapid movement, it will automatically correct the keystone distortion.





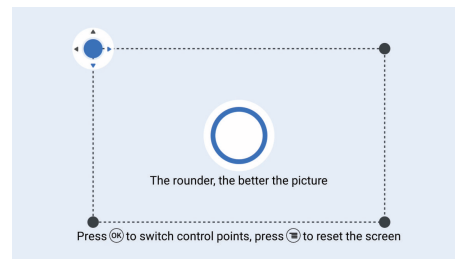 
2. Manual Keystone Correction

Go to **Homepage > Dashboard** ⚙️ > **All settings** ⚙️ > **Projector > Keystone > Manual Keystone** to manually correct the image shape by four points.





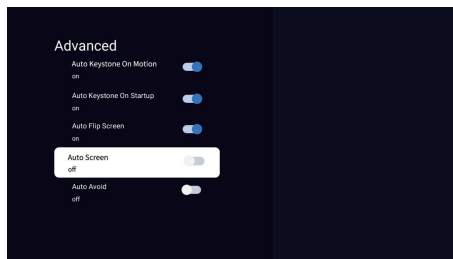 Intelligent Screen Fit

Go to Homepage > Dashboard  > All settings  > Projector > Keystone > Advanced > **Auto Screen** to enable the function. The projector will automatically adjust the projected image to fit the screen.



Intelligent Obstacle Avoidance

Go to Homepage > Dashboard  > All settings  > Projector > Keystone > Advanced > **Auto Avoid** to enable the function. The projector will automatically adjust the projected image to avoid any objects on the projection surface.

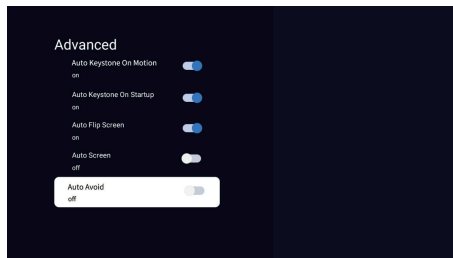 


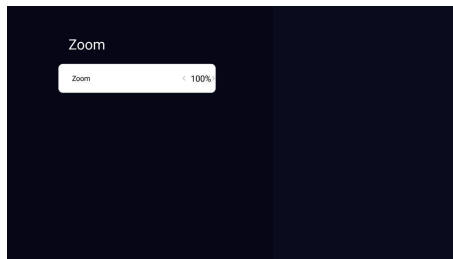 



Image Scaling

Go to Homepage > Dashboard  > All settings  > Projector > Zoom to reduce or enlarge the image size.



PROJECTOR CONNECTION AND INPUT SOURCE

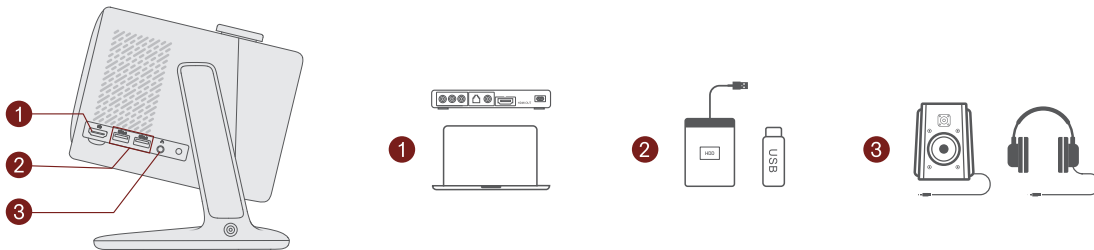 Connect your device to the projector correctly, then select the right input source.



USB Connection: Insert the disk. Then go to **Homepage > Apps** and select **MultiMediaPlayer** under **Your apps** tab to locate and play the file.

Tip:

For Basic TV, go to **Homepage** and select **MultiMediaPlayer** to locate and play the file.

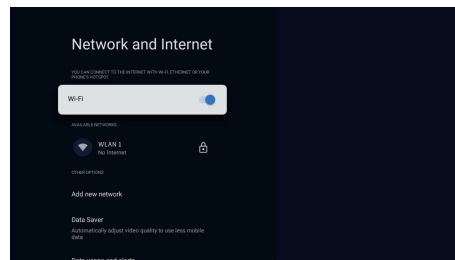 
HD Connection: Connect the device. Then press the **Input** button on the remote control or go to **Homepage > Dashboard** ⚙️ > **Inputs** and select **HD**.

Wired Speaker and Headphones Connection: Not required to select any input source.

WIFI CONNECTION

You can connect your projector to your router's WiFi by going to **Homepage > Dashboard** ⚙️ >

All settings ⚙️ > **Network & Internet**.



GOOGLE ASSISTANT


Your TV is more helpful than ever. Use your voice to find movies, streaming apps, play music and control the TV. Ask Google Assistant to find a specific title, search by genre, or get personalized recommendations. Even get answers on screen, control smart home devices, and more. Press the Google Assistant button on the remote to get started.



GOOGLE CAST™

Google Cast is a platform that lets you stream your favorite entertainment from your phone, tablet or laptop right to your projector. Easily control your TV with apps you already know and love from your iPhone®, iPad®, Android™ phone or tablet, Mac® or Windows® laptop, or Chromebook.

To use Google Cast, please ensure you are using a Google Cast-enabled app and follow the instructions below.

- ① Connect your device and the projector to the same wireless network.
- ② Open the streaming app on your device.
- ③ Play a video and tap the casting icon  on the video screen.
- ④ Select **AURZEN BOOM MINI** to connect. The projector will display the video from your device.

Due to copyright restrictions, certain content cannot be cast to the projector. You can stream the content on the projector by installing same applications from the **Apps** tab.

* Screen Mirroring Using the Google Home App (For Android Devices)

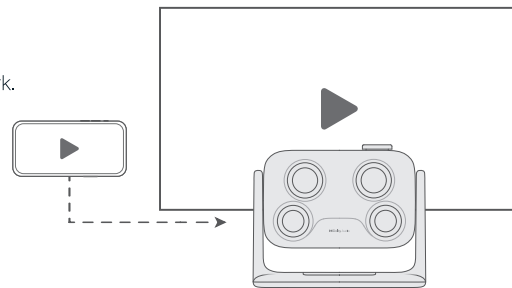 
You can mirror your entire Android device screen onto the projector screen.

- ① Ensure that you have installed the Google Home app on your device.
- ② Ensure that both your device and the projector are connected to the same wireless network.
- ③ Open the Google Home app and go to the **Devices** tab. Find and select **AURZEN BOOM MINI** (or the name of your projector if you have renamed it).
- ④ On the device page, tap **Cast my screen** and confirm when prompted. Your device's screen will be mirrored on the projector screen.

* Screen Mirroring Using the AirScreen App

You can mirror the entire screen from your iOS/Android device onto the projector screen.

- ① Ensure that both your device and the projector are connected to the same wireless network.
- ② Search and install AirScreen on the Apps tab – AirPlay is available on your projector.
- ③ Open AirScreen app and follow the on-screen instructions to complete the process.



Tip:

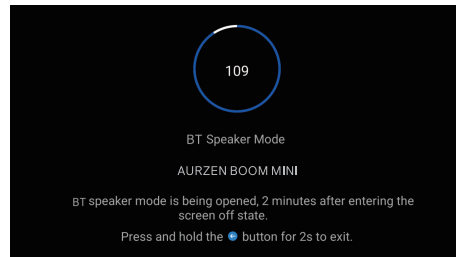 
Feel free to search for and install other screen mirroring apps as needed.

BT SPEAKER MODE

You can use this projector as a BT speaker by connecting your mobile device to it through a BT connection.

Step 1:

Go to **Homepage > Dashboard** ⚙️ > **All settings** ⚙️ > **Projector > BT Speaker Mode** to make the projector ready for a BT connection.




Step 2:

Access your mobile device's BT settings and activate BT. Search for **AURZEN BOOM MINI** in the available devices list to pair your mobile device with the projector.

Tip:

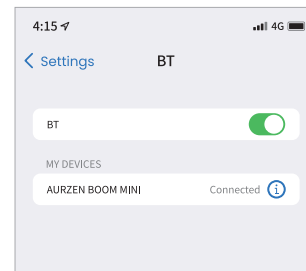 To exit the **BT Speaker Mode**, simply press the **Back** button on the remote control for 2 seconds.



MORE SETTINGS

1. Color Temperature

Go to **Homepage** > **Dashboard** (⚙️) > **All settings** (⚙️) > **Display & Sound** > **Picture** > **Advanced Settings** > **Color Temperature** to select from **User**, **Cool**, **Standard**, and **Warm**.

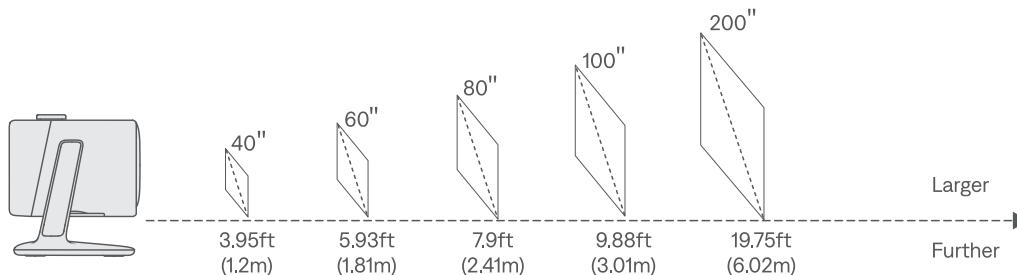 
2. Reset

Go to **Homepage** > **Dashboard** (⚙️) > **All settings** (⚙️) > **System** > **About** > **Reset** to restore the projector to factory settings.

3. System & Product Info

Go to **Homepage** > **Dashboard** (⚙️) > **All settings** (⚙️) > **System** > **About** to check system & product information.

PROJECTION DISTANCE AND SIZE



- * For optimal image quality, we recommend a projection size of 60". Position the projector 5.93ft (1.81m) away from the wall or screen.
- * The recommended projection distance varies with different projection contents. Please adjust the distance between the wall/screen and the projector as needed.
- * Ambient darkness will improve the clarity of the projected images.

SPECIFICATION

Display Technology	LCD	Light Source	LED
Resolution	Native 1920 x 1080P	Input Signal	576i/576P/720i/720P/1080i/1080P
Installation Type	Front/Rear/Ceiling	Aspect Ratio	4:3/16:9/Auto
Focus	Auto and Electric/Manual	Keystone	Auto and Electric/Manual

Unit Dimension	9.1 x 7 x 7.6 inches (232 x 178 x 192mm)	Power Supply	29.0V $\overline{\text{---}}$ 3.8A
Photo Format Supported	JPEG/BMP/GIF/PNG	Audio Format Supported	OGG/AAC/MP3/FLAC/WAV
Video Format Supported	HDR10/HLG/HEVC/PRIME HDR/AV1/MPEG-1/2/41080P30fpsH.264/H.2654KP60pfs		
Mounting Screws	1/4"	Screw Number	1 (not included)
Speaker	10W x 2	Ports	HD In x 1 / USB x 2 / Audio Out x 1

Statement

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Google Home, Google Cast and other marks are trademarks of Google LLC.

Dolby Audio

Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories.

NETFLIX

Netflix is a trademark of Netflix, Inc.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information:

- The radiated output power of this device meets the limits of FCC radio frequency exposure limits. This device should be operated with a minimum separation distance of 20cm (8 inches) between the equipment and a person's body.
- The portable device has been evaluated to meet general RF exposure requirement. It can be used in portable exposure condition without restriction.

Canada compliance statement /Conformité réglementaire canadienne :

This device complies with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Exposure to radio frequency energy:

- The radiated output power of this device meets the limits of IC radio frequency exposure limits.
- This device should be operated with a minimum separation distance of 20 cm (8 inches) between the equipment and a person's body.
- The portable device has been evaluated to meet general RF exposure requirement. It can be used in portable exposure condition without restriction.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

La bande 5150–5250 MHz est réservée uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

L'exposition à l'énergie radiofréquence:

- La puissance de sortie rayonné de cet appareil est conforme aux limites de la IC limites d'exposition aux fréquences radio. Cet appareil doit être utilisé avec une distance minimale de séparation de 20 cm entre l'appareil et le corps d'une personne.
 - L'appareil a été évalué et répond aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portables sans restriction.
- CAN ICES (B) / NMB (B)



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.



The symbol indicates class II equipment



The symbol indicates AC voltage



The symbol indicates DC voltage



For indoor use only



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The mains plug is used as the disconnect device. The socket-outlet shall be installed near the equipment and shall be easily accessible.



EU Compliance Statement: Shenzhen Neutop Optoelectronics Co., Ltd. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://aurzen.s3.us-west-1.amazonaws.com/resource/doc/Boom_mini_Neutop_Declaration_of_Conformity.pdf

The below radio frequency specification only apply to EU and UK regions:

	Frequency Range	Transmit Power (EIRP)
Wi-Fi 2.4G/BT	2400-2483.5MHz	<20dBm
Wi-Fi 5G	5150-5250MHz	<23dBm
	5725-5850MHz	<14dBm

Operations in the 5.15-5.35GHz band are restricted to indoor usage only in following Countries:



AT	BE	CY	CZ	DK	EE	FL
FR	DE	EL	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT	SK
SI	ES	SE	UK	BG	RO	HR



The product complies with 'RG1 IEC/EN 62471-5:2015'.

The product label and certification information are located at the bottom of the product.

CONTACT US



Email

| support@aurzen.com



Phone

| +1-667-218-4830 (Mon-Fri, 9:00 to 17:00 EST)

*If you need assistance outside these hours, please email us for assistance.