



Google TV



**KODAK LUMA 500**  
FHD ULTRA SMART PICO PROJECTOR

# User Manual

5.2"L | 5.2"W | 1.3"H (13.2 cm | 13.2 cm | 3.4 cm)

Please read all directions before using the product and retain this guide for reference.

# CONTENTS

1	INTRODUCTION	3
2	SPECIFICATIONS	3
3	PACKAGE CONTENTS	3
4	SAFETY PRECAUTIONS	4
5	PRODUCT OVERVIEW	5
6	REMOTE CONTROL VIEW	6
7	INSTALL BATTERIES INTO THE REMOTE CONTROL	6
8	PAIR THE REMOTE CONTROL	7
9	CHARGING THE PROJECTOR	7
10	TURNING THE PROJECTOR ON/OFF	7
11	SET UP GOOGLE TV™ ON THE PROJECTOR	8
12	NAVIGATING YOUR PROJECTOR	8
13	PROJECTOR SETTINGS	9-12
14	CAST CONTENT FROM YOUR ANDROID DEVICE TO THE PROJECTOR	12
15	MIRROR OR STREAM VIDEO FROM YOUR IOS DEVICE TO THE PROJECTOR	12-13
16	PAIRING EXTERNAL DEVICES VIA BLUETOOTH®	13
17	ADJUSTING FOCUS	13
18	GOOGLE ASSISTANT	13
19	CONNECTING EXTERNAL DEVICES	14
20	USING THE AUDIO OUT JACK	15
21	INSTALLING APPS ON GOOGLE TV	15
22	ADDING PROFILES ON GOOGLE TV	15
23	CREATING A PROFILE LOCK ON GOOGLE TV	16
24	USING THE GOOGLE TV APP ON YOUR PHONE	16
25	TROUBLESHOOTING	17
26	CUSTOMER SERVICE	18
27	SAFETY NOTICE	18-23
28	WARRANTY INFORMATION	23-25

## 1. INTRODUCTION

Thank you for purchasing the KODAK LUMA 500 ULTRA SMART PICO PROJECTOR. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

## 2. SPECIFICATIONS

Product type: Projector  
Product length: 5.2" (13.2 cm)  
Product width: 5.2" (13.2 cm)  
Product height: 1.3" (3.4 cm)  
Native resolution: 1920 x 1080, 4K compatible  
Power input: 15V/2.4A  
Battery Capacity: 10,500 mAh  
Display technology: DLP 0.23 1080P  
Brightness: 150 ANSI lumens  
Light source: RGB LED  
Light source life: 30,000 hours  
Contrast ratio: 400:1  
Aspect ratio: 16:9  
Throw ratio: 1.2:1  
Offset: 100%  
Zoom: 50% - 100%  
Keystone correction: 4-point correction,  $\pm 40^\circ$   
Projection mode: Front, front ceiling, rear, rear ceiling  
Uniformity:  $\geq 90\%$   
Projection screen size: Up to 150" (optimal 80")  
Speakers: Built-in 1.5W x 2

Audio out: 3.5 mm  
Audio format: MP3, WMA, OGG, AAC, EAC3  
Photo format: PEG, PNG, GIF, BMP  
Video format: H.265 10-bit 4K\*2K@60fps, VP9 4K\*2K @60fps, AVS2-P2 up to 4K\*2K@60FPS, H.264 AVC 4K\*2K@30fps, MPEG1/2/4 ASP, VC-1, AVS+, RealVideo8/9/10, AV1 10-bit 4K\*2K@60fps  
OS: Android™ [#] for TV  
Connectivity: Bluetooth® 5.0, Wi-Fi® 2.4 GHz/5 GHz  
Wireless input: Google Cast™  
Installation required: No  
Adult assembly required: No  
Additional tools required: No  
Country of origin: China  
Warranty included: Yes

 
## 3. PACKAGE CONTENTS

Kodak Luma 500  
USB-C Charging Cable  
Remote Control  
User Guide

## 4. SAFETY PRECAUTIONS

- Do not attempt to disassemble this device for any reason.
- Do not store the projector in areas where it will be exposed to high temperatures, humidity, or direct sunlight. Exposure to any or all of these could permanently damage the projector.
- Never handle the projector with damp or wet hands. This could damage the projector or create the risk of electric shock.
- Keep the projector out of the reach of children.
- Never point the projector at someone else's face or look directly into the projector light. The light is bright and could cause damage.
- Do not use products such as alcohol, gasoline, diluent, or any other organic solvent when cleaning or attempting to clean this product.
- Do not use this device in an environment where it will be exposed to heavy dust or humidity/moisture.
- Never drop or shake the projector, as this could cause it to malfunction or permanently damage the inside parts.
- Do not use the projector while bathing or in a shower.
- Do not place or store the projector where it can fall or be pulled into a tub or sink.
- Do not place, drop, or submerge the projector in water or any other liquid.
- If the projector somehow falls into water despite you taking all of the above precautions, please do not reach into the water to retrieve it. Unplug it immediately and then retrieve it.
- Take care that objects do not fall and liquids are not spilled onto the projector.
- Do not place, drop, or submerge the projector in water or any other liquid.
- If the projector somehow falls into water despite you taking all of the above precautions, please do not reach into the water to retrieve it. Unplug it immediately and then retrieve it.
- Take care that objects do not fall and liquids are not spilled onto the projector.


## 5. PRODUCT OVERVIEW

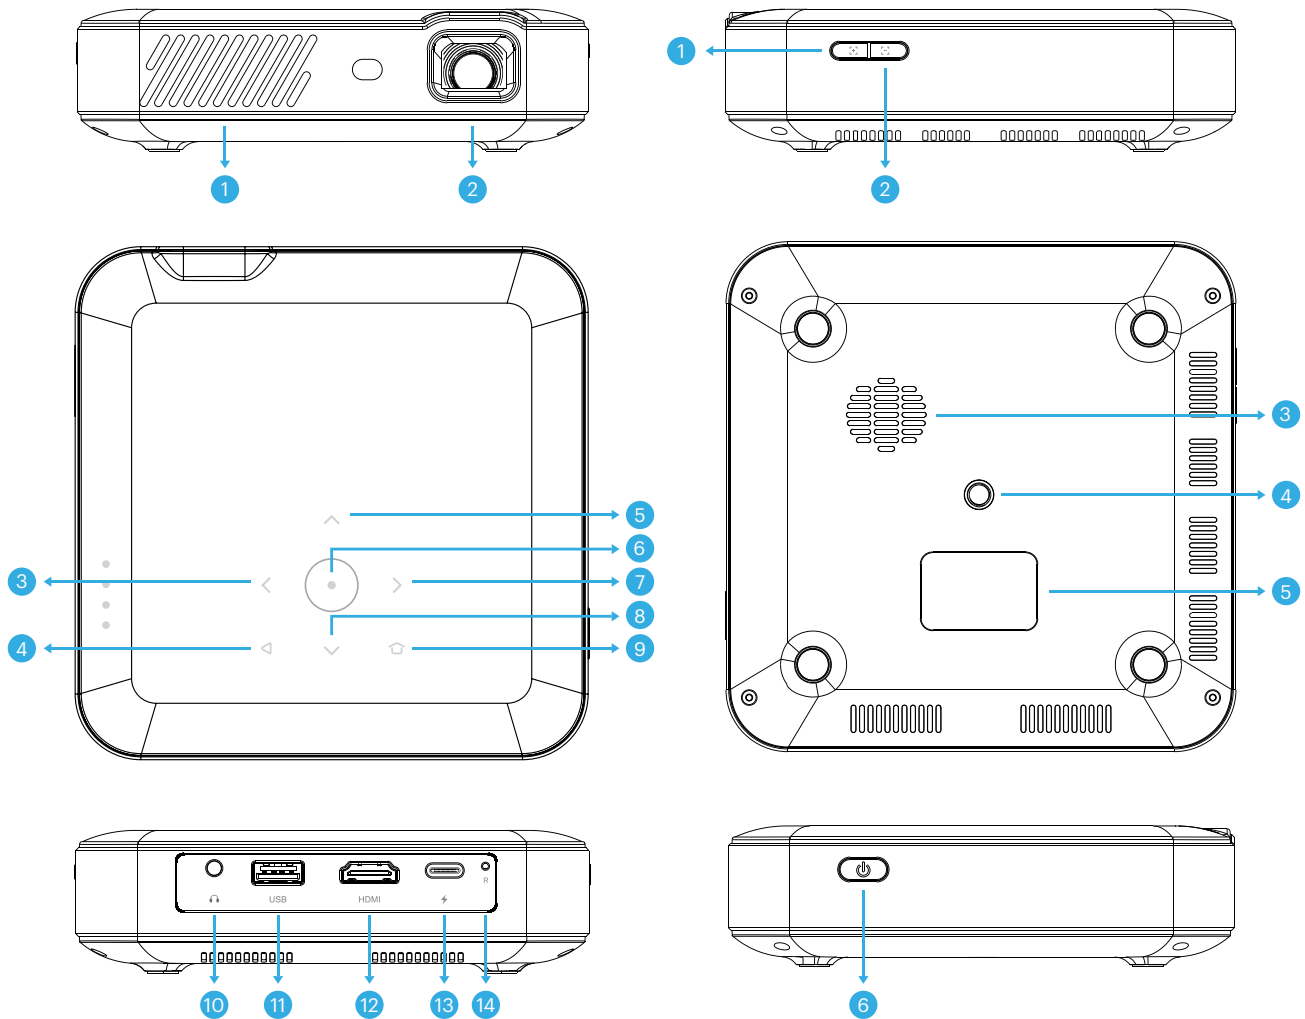

1. Air Outlet
2. Lens
3. Left
4. Return
5. Up
6. Confirm / Back (press more than two (2) seconds)
7. Right
8. Down
9. Home
10. Audio Output
11. USB Input / Power Out
12. HDMI Input
13. USB-C Charging Port
14. Reset

1. Zoom In
2. Zoom Out
3. Speaker
4. Tripod Dock
5. Rating Label
6. Power

## 6. REMOTE CONTROL VIEW

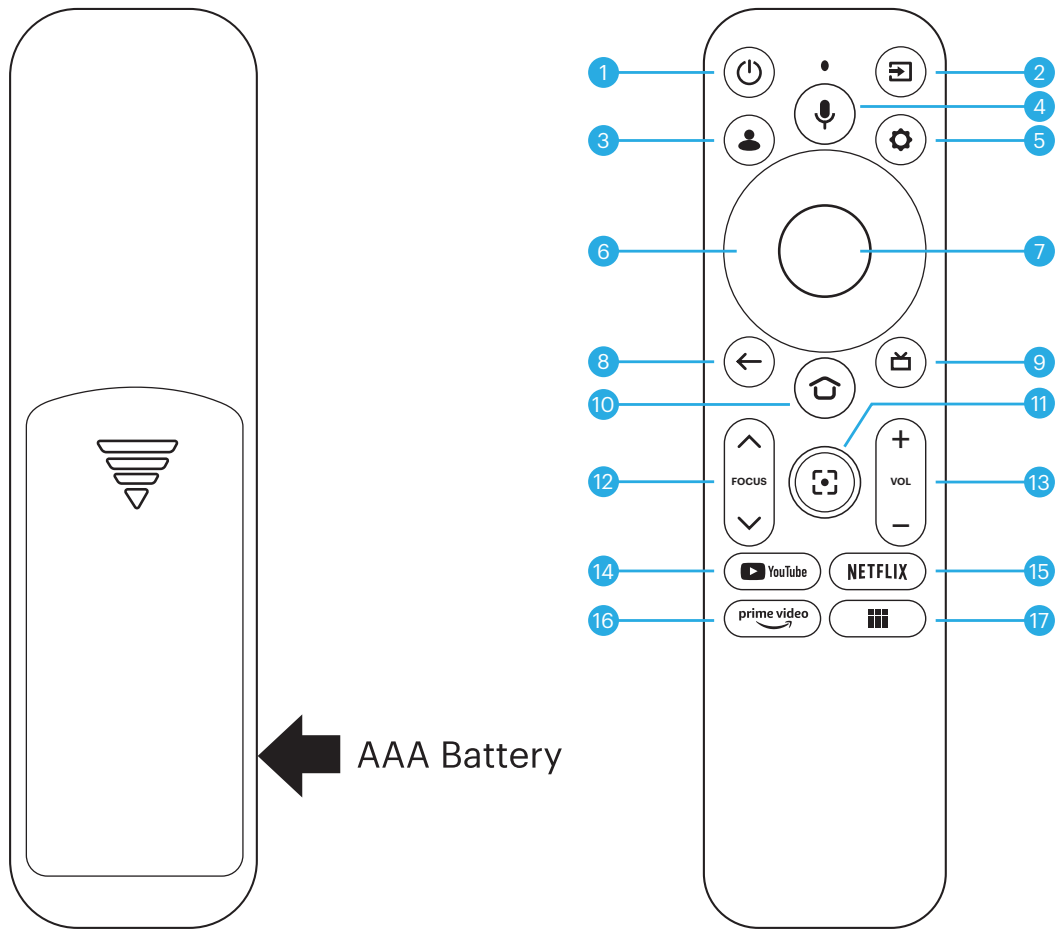 



- |                       |                  |
|-----------------------|------------------|
| 1. Power on/off       | 10. Home         |
| 2. Input source       | 11. Autofocus    |
| 3. Account            | 12. Manual focus |
| 4. Google Assistant   | 13. Volume       |
| 5. Projector settings | 14. YouTube      |
| 6. Direction pad      | 15. Netflix      |
| 7. Confirm            | 16. Prime Video  |
| 8. Return             | 17. App library  |
| 9. Guide              |                  |

## 7. INSTALL BATTERIES INTO THE REMOTE CONTROL

1. Press down and slide off the battery cover.
2. Insert two (2) AAA batteries into the battery compartment.
3. Place the battery cover back on the remote control.

## 8. PAIR THE REMOTE CONTROL

Power on the projector and bring the remote control within 10 cm of the device.

 
Press and hold the  and  buttons until the screen indicates Pairing Successful.

## 9. CHARGING THE PROJECTOR

Before using the projector, connect it to the charger and allow it to fully charge. Always use the original charger that was provided to ensure proper charging.

If the red indicator LED light is flashing, you see a red battery icon in the upper right corner of the screen, or you receive a Low Battery notification on-screen, this means that the battery is low, and you should plug the projector in for it to recharge. While the projector is charging, the indicator LED will be a solid red light. Once the process has completed, the indicator LED will change to a blinking white light.


When the projector is powered on, you can connect the charging cable of your device to the USB port of the projector, and it will operate as a mobile power bank to charge your electronic devices. The power output is 5 V/1.0 A.

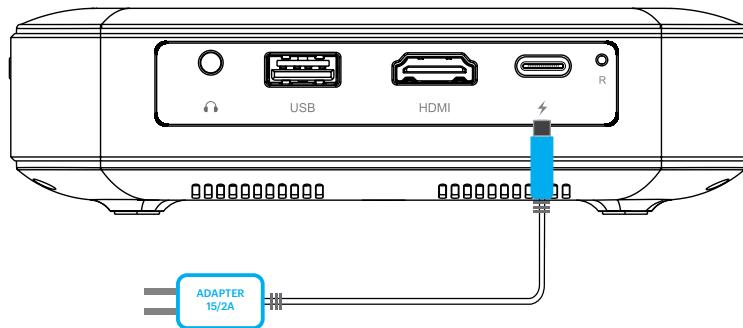

## 10. TURNING THE PROJECTOR ON/OFF

To turn the projector on or off, hold the power button on the side for three (3) seconds. Once powered on, tap the power button lightly to display the remaining battery percentage on the screen.

 **NOTE:** The projector can also be turned on or off by pressing the Power button on the remote control.

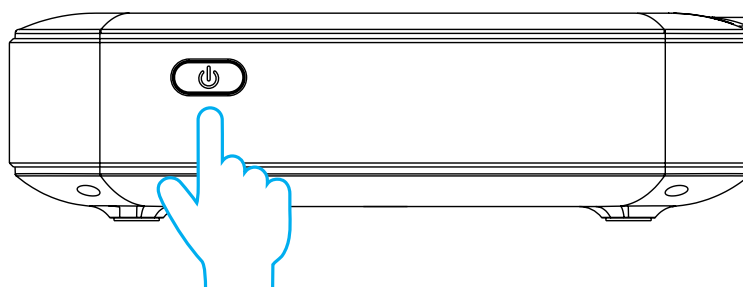


## 11. SET UP GOOGLE TV™ ON THE PROJECTOR

There are two methods for setting up Google TV on your projector:

### Method 1: Set Up with the Google Home App

 1. Select “Set up Google TV” when prompted.
2. Download and open the Google Home app on your smartphone.
3. In the Google Home app, tap Add > Set up device > Set up new devices in your home.
4. Choose or add a home. Tap scan code and allow the app to use your phone’s camera.
5. Scan the QR code on your screen.
6. Follow the in-app instructions to complete setup.

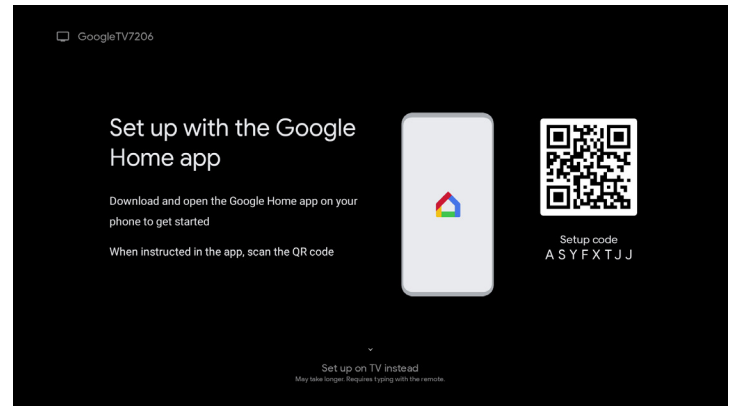

### Method 2: Set Up with Your Remote

1. Select “Set up Google TV” when prompted.
2. When the screen says “Set up with the Google Home app,” scroll down to “Set up on TV instead.”
3. Select your Wi-Fi network and enter your password.
4. Sign into your Google account.
5. Follow the on-screen instructions to complete setup.

## 12. NAVIGATING YOUR PROJECTOR

 
 
 
When the projector unit is powered on, the Google TV home menu will automatically load. The home menu is the starting point for all operations on your projector.

- Press the settings button to pull up the settings sidebar for options such as device name, account options, network connection, and more.
- Press the Input source button to select your input source.
- Press the Guide button to switch to a different input.
- Press the Home button to return to the home menu at any time.



## 13. PROJECTOR SETTINGS


From the Google TV home page, navigate to Home > Settings to access projector settings.

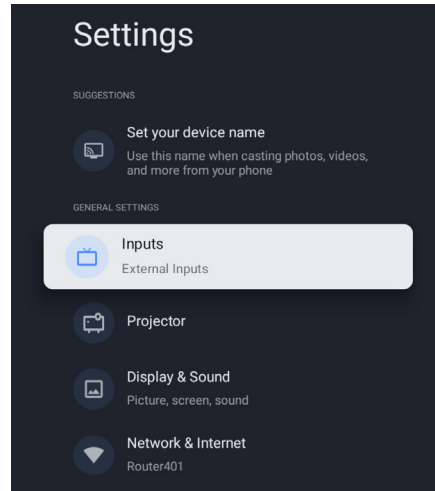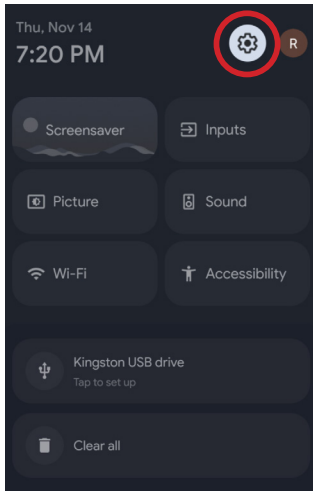


**Inputs:** Navigate to this button and press the OK button to select. This will access the Input window, where you can select the standby input and other input settings.



 
**Projector:** Navigate to this icon and press the OK button to select. This will access the projector window, where you can access focus, image correction, Bluetooth speaker mode, and advanced settings.



 
**Display & Sound:** Navigate to this icon and press the OK button to select. This will access the Display & Sound window, where you can adjust settings like picture, sound, and audio output.



 
**Network & Internet:** Navigate to this icon and press the OK button to select. This will allow you to connect to Wi-Fi and access advanced network settings.



 **Accounts & Sign In:** Navigate to this icon and press the OK button to select. This will allow you to log into and access your Google TV accounts.



 
**Privacy:** Navigate to this icon and press the OK button to select. This will open the privacy window, where you can adjust settings such as location and ads, Google Assistant settings such as voice control, searchable apps, and a SafeSearch filter.




**Apps:** Navigate to this icon and press the OK button to select. This will open the App window, where you can access App settings such as permissions, special app access, and security & restrictions.



 **System:** Navigate to this icon and press the OK button to select. This will access the System window, where you can perform a factory reset, update your device, and adjust language, date & time, and more.



 **Accessibility:** Navigate to this icon and press the OK button to select. This will allow you to access advanced accessibility settings such as TalkBack, text to speech, and more.

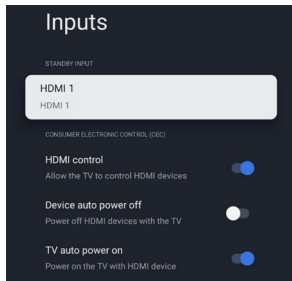


## INPUT WINDOW

**Standby Input** – Select from HDMI 1, Blu-ray, Cable, DVD, and Game console inputs.

**HDMI Control** – Allow the TV to control HDMI devices.

**Device Auto Power Off** – Power off HDMI devices with the TV.

 **TV Auto Power On** – Power on the TV with an HDMI device.

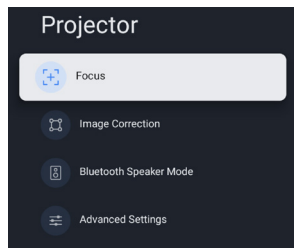

## PROJECTOR WINDOW

Your projector settings will be displayed. Navigate to the setting option you wish to change and press the OK button to confirm your selection.

**Focus** – Select from auto or manual focus and access advanced settings.

**Image Correction** – Adjust keystone automatically or manually, adjust zoom and shift, reset to default image, and access advanced settings.

**Bluetooth Speaker Mode** – Connect to an external Bluetooth speaker.

**Advanced Settings** – Adjust projection mode, check remote control battery level, and calibrate your image.

- Front: The projector is placed on a table in front of the screen. This is the most common way to position the projector for quick setup and portability.

- Front ceiling: The projector is suspended upside-down in front of the screen. A ceiling/wall mount kit is required (not included).

 
- Rear: The projector is placed on a table behind the screen. A special rear projector screen is required (not included).

- Rear ceiling: The projector is suspended upside-down from behind the screen. A special rear projector screen and ceiling wall/mount kit are required (not included).

### NOTES:

For more control over projector height, you can place it on a tripod (sold separately).

The distance between the projector lens and the screen determines the projector screen size.

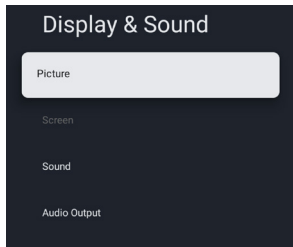


## DISPLAY & SOUND WINDOW

**Picture** – Adjust brightness and select picture mode between Standard, Vivid, Movie, Natural, and Custom options.

**Sound** – Choose between Standard, Movie, Music, Sport, and Custom sound modes.

 **Audio Output** – Adjust digital output and digital output delay.

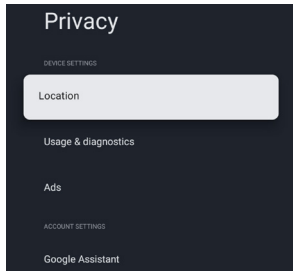


## PRIVACY WINDOW

**Location** – Turn location status on/off, turn Scanning always available on/off, and control which apps use your locations.

**Usage & Diagnostics** – Turn usage & diagnostics on/off.

**Ads** – Manage ad settings, such as resetting your advertising ID.

 **Google Assistant** – Turn voice control on/off, view permissions, turn personal results on/off, select which apps to include in search results, and turn the SafeSearch filter on/off.

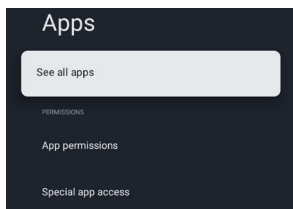




## APPS WINDOW

**See All Apps** – View all installed apps.

**App Permissions** – Manage app permissions.

**Special App Access** – Manage ad settings, such as resetting your advertising ID.

   - Energy Optimization: Select which apps you want to optimize energy use of.
- Usage Access: Select which apps track what other apps you're using and how often, as well as carrier, language settings, and other details.
- Notification Access: Select which apps may read all notifications.
- All Files Access: Select which apps may read, modify, and delete files on your device.
- Display Over Other Apps: Select which apps will display on top of other apps you're using.
- Modify System Settings: Select which apps may modify system settings.
- Turn Screen On: Select which apps may turn the screen on.

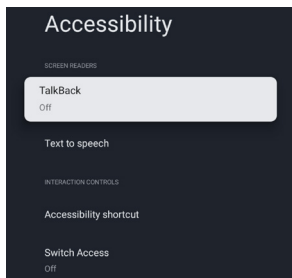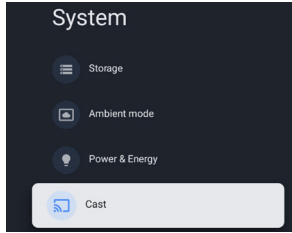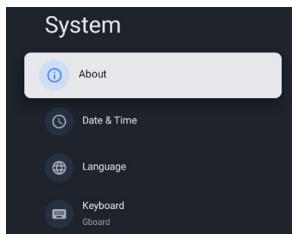

## SYSTEM WINDOW

**About** – Perform a system update or factory reset, rename your device, access your device’s status, serial number, and legal information, and determine Android TV OS version.

**Date & Time** – Select automatic date & time or manually set a date, time, and time zone, and turn 24-hour format on/off.

**Language** – Select a device language.

**Keyboard** – Access keyboard settings and manage keyboards.

**Storage** – View how much storage has been used and free up storage, if necessary.

**Power & Energy** – Adjust power on behavior, power and energy settings, and set a timer.

- Power On Behavior: Choose what your screen displays when turned on.

- Power & Energy: Adjust when the TV will automatically turn off.

- Power: Set a sleep timer or switch off the timer and adjust auto sleep.

- Timer: Turn power on time off/on.

**Cast** – Choose when to allow others to control your cast media.

## ACCESSIBILITY WINDOW

**TalkBack** – Turn TalkBack on/off.

**Text to Speech** – Access text to speech settings.

**Accessibility Shortcut** – Turn the accessibility shortcut on/off.

**Switch Access** – Turn switch access on/off.

## 14. CAST CONTENT FROM YOUR ANDROID DEVICE TO THE PROJECTOR

1. Connect your device (e.g., phone, tablet, or laptop) to the same Wi-Fi® network as your projector.
2. Open a Google Cast™-enabled app that has the content you want to cast.
3. In the app, find and select the Cast button.
4. On your device, select the name of your projector.
5. Wait for the Cast symbol to change color, indicating a successful connection.

## 15. MIRROR OR STREAM VIDEO FROM YOUR IOS DEVICES TO THE PROJECTOR

First, you’ll need to install AirPlay on your projector. Install the AirScreen app to enable AirPlay on your projector. Once completed, follow these steps to mirror or stream from your iOS device.

### Screen Mirroring from iPhone or iPad

1. Make sure that your iOS device and projector are on the same Wi-Fi® network. You can also use your phone’s hotspot.
2. Swipe down on your phone home screen to display the control console and tap the AirPlay icon.
3. Select the device you want to cast to.

## Screen Mirroring from Mac

1. Make sure that your Mac and projector are on the same Wi-Fi® network. You can also use your phone's hotspot.
2. Click the AirPlay icon on the Mac and select your projector to start mirroring. The AirPlay icon in the menu bar will turn blue when AirPlay is active.
3. To stop mirroring, click the AirPlay logo again and select "Turn AirPlay off."

**Note:** For MacBook Air, MacBook Pro, and iMac, the AirPlay icon will only be displayed in the menu bar when AirPlay mirroring is available.

## Streaming Video from iPhone or iPad

1. Make sure that your iOS device and projector are on the same Wi-Fi® network. You can also use your phone's hotspot.
2. Open the streaming apps you want to cast on the projector and select a video to play.
3. Click the AirPlay of cast icons in the top right corner to cast to the projector.

**Note:** Copyrighted content from HULU, NETFLIX, and other similar services CANNOT be mirrored or screencast. To view copyrighted content from these services, download and use the official apps directly through the projector.

## 16. PAIRING EXTERNAL DEVICES VIA BLUETOOTH®

External headphones or speakers can be paired to the projector via Bluetooth®. Follow these steps to connect Bluetooth® headphones or speakers:

1. Open the Google TV Settings and select "Remote & Accessories." Click "Add Accessory."
2. Activate pairing mode on the device you want to connect and select it from the list.
3. Wait for the two devices to successfully pair together.

## 17. ADJUSTING FOCUS

If the image on the screen appears fuzzy or unfocused when you turn the projector on, use the Focus button on your remote control to correct the image until it appears sharp and clear.

**NOTE:** For best performance, the projector must be located a minimum distance of 3.5 feet (1 meter) from the screen.

## 18. GOOGLE ASSISTANT

With Google Assistant, you can navigate through the apps and streaming services using your voice.

 
1. Press the Google Assistant button to activate Google's voice-powered virtual assistant.
2. On the projection screen, an introduction will appear. Follow the steps to finish setup.

Once the Assistant is set up, press the Google Assistant button to ask your question or give a command.

## 19. CONNECTING EXTERNAL DEVICES

### A. USB Drives

First, download the File Commander app from Google Play. Then, simply insert the drive into the corresponding port on the side of the projector. The projector will read the files directly from the drive.

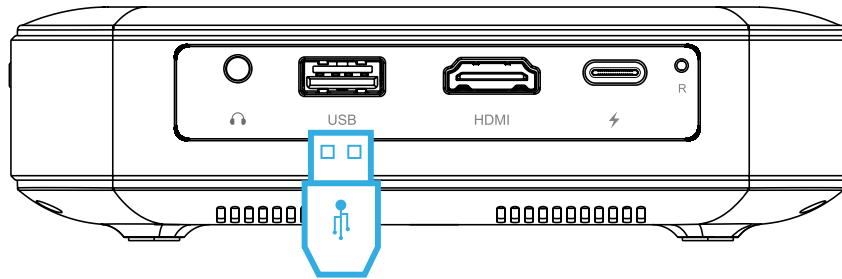

### B. HDMI® Compatible Devices

 
If you're using an HDMI compatible device, such as a laptop, personal computer, smartphone, tablet, or video game console, connect an HDMI cable from the device to your projector to access and view images and pictures. Then, open settings and under "Input" select "HDMI."

An HDMI-to-HDMI cable is included, but if your device requires an adapter, you will need to purchase it separately. To make things a little easier, we've compiled this table of devices and adapters for your convenience.

1	Devices with HDMI port	HDMI to HDMI cable (included)
2	Devices with mini HDMI port	Mini HDMI to HDMI adapterHDMI to HDMI cable (included)
3	Devices with micro HDMI port	Mini HDMI to HDMI adapterHDMI to HDMI cable
4	iOS devices with lightning port	Lightning digital AV adapterHDMI to HDMI cable
5	Devices with USB-C (USB type C) port	USB-C to HDMI adapterHDMI to HDMI cable
6	Devices with USB-C (USB type C) port	USB type C to HDMI cable

## 20. USING THE AUDIO OUT JACK

While the projector does include two (2) built-in speakers for regular use, you can also connect either headphones or a portable speaker to the 3.5mm audio out jack, as shown in the image below.

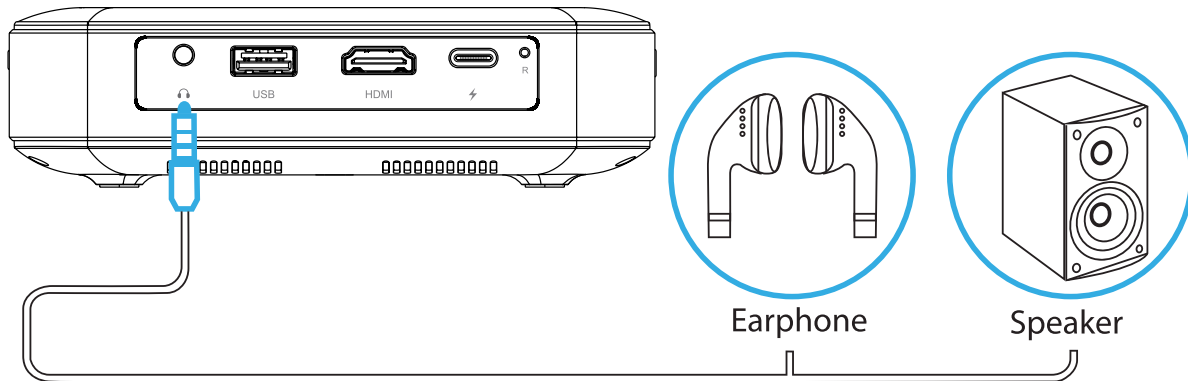

**NOTE:** External speakers can also be connected to the projector via Bluetooth.

## 21. INSTALLING APPS ON GOOGLE TV

1. Use Google Assistant on your remote or select Search on the home screen to find the app you want to download.
2. If the app is available, a page will appear with the app.
3. Select Install.
4. To remove an app, scroll to the “Your Apps” row on your home screen, find the app you want to uninstall and hold the select button. Then, select View Details > Uninstall.

**NOTE:** You can also browse for apps by scrolling to the “Apps” tab from your Google TV home screen.

## 22. ADDING PROFILES ON GOOGLE TV

1. From your Google TV home screen, go to your profile picture or initial.
2. Select your name, then click “Add account.”
3. A QR code will appear. You can either scan the QR code on your phone or select down on your Google TV to sign into the Google account you want to add.
4. Follow on-screen instructions to complete setup.

### Removing or Managing Profiles

1. From the Google TV home screen, select Settings > Accounts & Sign In.
2. Select the profile you want to delete.
3. Select Remove > Remove account.

**Note:** If you remove all profiles on your device, your device will be factory reset, and all your data will be lost.

## 23. CREATING A PROFILE LOCK ON GOOGLE TV

With a profile lock, users need a PIN to access your profile's content on Google TV and when switching profiles.

You can enable this feature in two ways:

- When you set up your Google TV device for the first time, you will be prompted to set up a profile lock.
- You can also update or deactivate this feature at any time through Google TV settings.

**Note:** On devices with multiple profiles, profile locks set on one profile will only apply to that profile.

1. From the Google TV home screen, navigate to Settings > Accounts & Sign In > Choose account.
2. Select the account you want to apply the profile lock to.
3. Turn Profile lock on.

If you've previously set up a device settings lock, it will automatically be converted into a profile lock.

## 24. USING THE GOOGLE TV APP ON YOUR PHONE

When using the Google TV app on your phone or tablet, you can connect to your Google TV to play movies and TV shows, control media playback, activate Google Assistant, change the volume, and enter text to perform searches or enter login information.

### Using the App on Your Android Device

1. Open the Google TV app on your Android phone.
2. Near the bottom right, tap {#} TVs nearby.
3. Select your projector.
4. Enter the code that appears on your projector's screen.
5. Tap Pair.
6. To cast content from the app to your TV, select the video or TV show you want to watch and tap Watch on TV.

### Using the App on Your iOS Device

1. Open the Google TV app on your iPhone or iPad.
2. Select your projector.
3. Enter the code that appears on your projector's screen.
4. Tap Pair
5. To cast content from the app to your TV, select the video or TV show you want to watch and tap Watch on TV.



## 25. TROUBLESHOOTING

### Google TV is Unresponsive

If your projector freezes, sticks on one screen, or doesn't respond, try resetting your device:

1. Unplug your projector and leave it unplugged for one minute.
2. Plug the projector back in.
3. On your remote, press the power button.

If the TV unfreezes after you restart, you can prevent another freeze by:

- Checking for app updates
- Checking for system updates
- Signing out and back in

If your TV still freezes, try performing a factory reset.

### Settings Aren't Saving

If you change a setting on Google TV and it changes back the next time you turn on the device, try the following:

- Check your internet connection
- Check for system updates

### App Crashes

If an app crashes while you are using your projector, try the following:

- Check for app updates
1. Open the Google Play store on your projector.
  2. At the top right, select your profile picture or initial.
  3. Select Manage apps & games > Updates > Update all.
- Close background apps
1. From the Google TV home screen, select Settings > Apps.
  2. Select the app you want to close.
  3. Select Force stop > OK.

### Projector is Slow or Lagging

If your projector freezes, starts up slowly, responds slowly, or takes a long time to open apps, try the following:

- Restart your device
1. From the Google TV home screen, select Settings.
  2. Select System > Restart > Restart.
- Close background apps
1. From the Google TV home screen, select Settings > Apps.
  2. Select the app you want to close.
  3. Select Force stop > OK.
- Check for app updates
1. Open the Google Play store on your projector.
  2. At the top right, select your profile picture or initial.
  3. Select Manage apps & games > Updates > Update all.

**Tip:** To update apps automatically, in the Google Play store, select Settings > Auto-update all apps.

- Check for system updates
1. From the Google TV home screen, select System > About > System Update.
  2. The projector will scan for any available updates. Follow on-screen instructions to install any available updates.

## 26. CUSTOMER SERVICE

Should you experience any problems with your product, please contact us before returning the item to the place of purchase. We're here to help!

U.S. Support: [kodak@camarketing.com](mailto:kodak@camarketing.com), 844-516-1539

International Support: [kodakintl@camarketing.com](mailto:kodakintl@camarketing.com), 844-516-1540

For more help with Google TV, visit <https://support.google.com/googletv?sjid=5088849343920820749-NA#topic=10050480>

## 27. SAFETY NOTICE

Important Safety Notice for Kodak Luma 500 FHD Ultra Smart Pico Projector

This product has been designed to ensure the safety of the user when handled correctly, and in accordance with the user guide and the instructions provided.

It is important that the Kodak projector is handled properly and only used to project media as instructed in the user guide.

For future reference, keep the user guide in a safe place.

### WARNING

- Keep away from children and infants. Improper use of this product may cause suffocation or accident.
- Do not install the projector in a place with no ventilation (e.g., a bookshelf or closet). The increased internal temperature may result in a fire.
- Do not place the projector near sources of steam, oil, or oil mist (e.g., humidifiers or kitchen counters), as this may result in fire, corrosion, or electric shock.
- Do not use the projector in a damp place where it is likely to get wet (e.g., bathroom). This may result in fire or electric shock.
- Ensure good ventilation around the projector. To prevent fire due to increased internal temperature, place it at least 30 cm (11.8") away from the wall.
- Stop using the device immediately if it emits smoke or a strange smell, or otherwise behaves abnormally.
- The projector has a built-in battery. Do not subject it to heat, expose it to an open flame, or otherwise apply impact to it. Doing so may cause the projector to explode, resulting in injury.
- If the projector is dropped in water or any foreign object enters the device, unplug the cable, turn the projector off, and immediately cease use.

### WARNING

- Never attempt to take this product apart. You may be injured.
- If this product is dropped or damaged so that the inside is showing, do not touch it. Contact Kodak customer support at 844-516-1539 or email us at [kodak@camarketing.com](mailto:kodak@camarketing.com).

- Never get this product wet or handle it with wet hands. Doing so may result in electric shock and injury. Promptly unplug the USB cable once the battery is fully charged.
- Do not cover or wrap the projector or USB cable in a cloth or blanket, or otherwise place the projector in the sun or an environment where heat may build up. This could distort the casing and cause a fire.
- Use a soft dry cloth to clean the device. Do not clean with a damp cloth or volatile liquids such as paint thinner.
- If the device is not functioning properly, please contact the dealer you purchased this product from or Kodak customer support.
- Keep the cover closed to avoid dust and other particles from entering the inside of the device.
- Do not look directly into the projector lens when in use. This may cause damage to your eyes.
- When the lamp is on or has just been turned off, do not touch the air vent or lamp, as they will be very hot.
- Do not use the projector near devices that generate a strong magnetic field.
- Do not block the light beam emitted from the projector using a book or other object. The reflected heat may cause a fire and damage the lens.
- Proper ventilation is required. Do not block airflow around the unit, as this may cause injury and internal overheating.

### **Projector Care**

- Do not get the projector wet or drop it and do not expose it to sand, dust, or dirt.
- Do not use cleaning products or solvents such as those with bleach or alcohol to remove dirt.
- Never expose the battery to high temperatures, direct heat, or dispose by incineration.
- In hot weather, do not leave your projector in places such as in a car or on the beach. Do not leave it in damp places where weather exposure could result.
- Be careful not to allow any impact to the lens during transport. Also, do not touch the lens or use sharp tools such as knives or hammers.
- Do not drop anything onto the projector or allow anything to bang into the projector, as this may cause internal damage.
- Do not use high-voltage electrical equipment (e.g., bug zappers) near the projector, as this may cause it to malfunction.

### **Battery**

The battery is not charged at shipment. Charge the battery completely before use. Charge the battery using the supplied USB cable. Charging times will increase at ambient temperatures below 10 °C (50 °F) or above 35 °C (95 °F). Do not attempt to charge the battery in environments with temperatures above 40 °C (104 °F); at temperatures below 5 °C (41 °F), the battery will not charge.

At normal temperatures, the battery can be recharged about 300 times. A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life.

Caution: The battery and printer body may become warm to the touch after extended use.

### **Bluetooth® Devices**

**IMPORTANT:** Read the following notices before using the product's built-in Bluetooth transmitter.

Use only as part of a Bluetooth network. Kodak and its affiliates do not accept liability for damages resulting from unauthorized use. Do not use in applications requiring a high degree of reliability, for

example in medical devices or other systems that may directly or indirectly impact human life.

Changes or modifications not expressly approved by the Kodak representative responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Wireless data may be intercepted by third parties. The security of data transmitted over wireless networks is not guaranteed. Do not use the device in locations subject to magnetic fields, static electricity, or radio interference.

Do not use the transmitter in the vicinity of microwave ovens or in other locations subject to magnetic fields, static electricity, or radio interference that may prevent reception of wireless signals. Mutual interference may occur when the transmitter is used in the vicinity of other wireless devices operating in the 2.4 GHz band.

The Bluetooth transmitter operates in the 2.4 GHz band. The standard output is approximately 3.16 mW. This device operates on the same frequency as commercial, educational, and medical devices and wireless transmitters. It also operates on the same frequency as licensed transmitters and special unlicensed low-voltage transmitters used in radiofrequency identification tracking systems for assembly lines in other similar applications.

Trademark Information: The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks by C&A Marketing is under license.

#### Battery Warning

Do not disassemble, crush, or puncture battery. Do not expose to high temperatures. Dispose of properly according to local regulations. Do not short-circuit battery terminals.

#### Traceability in Europe

- UK: Global E-Commerce Experts  
Unit 5 Mountpark, Wide Lane  
Southampton SO18 2FA UK  
Tel: 02039 151930  
Email: rp@globalecommexperts.com

- EU: Global E-Commerce Experts  
Rijnlanderweg 766 Unit H  
2132 NM Hoofddorp Netherlands  
Tel: +44 2039 151930  
Email: rp@globalecommexperts.com



### Waste Electrical and Electric Equipment (WEEE)

This marking shown on the product or its literature indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their suppliers and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



For Users in USA and Canada

### FCC Statement:

The United States Federal Communications Commission (in 47 CFR 15.105) has specified that the following notice be brought to the attention of users of this product. Kodak Luma Flik HD9 Smart Projector. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful radio interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Modifications (part 15.21)

Any changes or modifications made to this device that are not expressly approved by C&A Marketing may void the user's authority to operate the equipment.

For further information, contact:

114 Tived Lane East, Edison, NJ 08837

Email: [kodak@camarketing.com](mailto:kodak@camarketing.com)

Telephone: 1-844-516-1539

Website: [www.kodakprojectors.caglobal.com](http://www.kodakprojectors.caglobal.com)

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Notice to Users in Canada (5 GHz)

CAUTION: When using IEEE 802.11a wireless LAN, this product is restricted to indoor use, due to its operation in the 5.15- to 5.52-GHz frequency range. The Innovation, Science and Economic Development Canada requires this product to be used indoors for the frequency range of 5.15 GHz to 5.25 GHz to reduce the potential for harmful interference to co-channel mobile satellite systems. High-power radar is allocated as the primary user of the 5.25- to 5.35-GHz and 5.65- to 5.85-GHz bands. These radar stations can cause interference with and/or damage to this device.

[www.kodakprojectors.caglobal.com](http://www.kodakprojectors.caglobal.com)

The Kodak trademark, logo, and trade dress are used under license from Eastman Kodak Company.

Google, YouTube, Google Home, Google Cast and other marks are trademarks of Google LLC.

Netflix is a registered trademark of Netflix, Inc.

Prime Video is a registered trademark of Amazon Technologies.

APPLE, AIRPRINT, IPOD, IPHONE, IPAD, APP STORE, MAC, MACINTOSH, and OS X are trademarks of APPLE INC. in the U.S. and other countries.

Bluetooth is a trademark of Bluetooth SIG, Inc. USA.

DLP® and the DLP logo are registered trademarks of Texas Instruments.

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and/or other countries.

Wi-Fi is a trademark of Wi-Fi Alliance in the U.S. and other countries.

Windows is a trademark of Microsoft Corporation and other countries.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Distributed by: C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837, USA

© 2024 C&A IP Holdings, LLC. All Rights Reserved. Made in China.

## 28. WARRANTY

### LIMITED WARRANTY TO ORIGINAL CONSUMER

This Kodak Luma 500 FHD Ultra Smart Pico Projector (Product”), including any accessories included in the original packaging, as supplied and distributed new by an authorized retailer is warranted by C&A Marketing, Inc. (the “Company”) to the original consumer purchaser only, against certain defects in material and workmanship (“Warranty”) as follows:

To receive Warranty service, the original consumer purchaser must contact the Company or its authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to the Company or its authorized service provider in order to obtain the requested service.

Service options, parts availability, and response times may vary and may change at any time. In accordance with applicable law, the Company may require that you furnish additional documents and/or comply with registration requirements before receiving warranty service. Please contact our customer service for details on obtaining warranty service:

USA: [kodak@camarketing.com](mailto:kodak@camarketing.com), 844-516-1539

International: [kodakintl@camarketing.com](mailto:kodakintl@camarketing.com), +1-844-516-1540

Shipping expenses to the Company’s Return Facility are not covered by this warranty and must be paid by the consumer. The consumer likewise bears all risk of loss or further damage to the Product until delivery to said facility.

**EXCLUSIONS AND LIMITATIONS** The Company warrants the Product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser (“Warranty Period”). If a hardware defect arises and a valid claim is received within the Warranty Period, the Company, at its sole option and to the extent permitted by law, will either (1) repair the Product defect at no charge, using new or refurbished replacement parts, (2) exchange the Product with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original device, or (3) refund the purchase price of the Product.

A replacement Product or part thereof shall enjoy the warranty of the original Product for the remainder of the Warranty Period, or ninety (90) days from the date of replacement or repair, whichever provides

you longer protection. When a Product or part is exchanged, any replacement item becomes your property, while the replaced item becomes the Company's property. Refunds can only be given if the original Product is returned.

This Warranty does not apply to:

- (a) Any non-Kodak Luma 500 FHD Ultra Smart Pico Projector product, hardware, or software, even if packaged or sold with the Product;
- (b) Damage caused by use with non-Kodak Luma 500 FHD Ultra Smart Pico Projector products;
- (c) Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes;
- (d) Damage caused by operating the Product outside the permitted or intended uses described by the Company;
- (e) Damage caused by third party services;
- (f) A Product or part that has been modified to alter functionality or capability without the written permission of the Company;
- (g) Consumable parts, such as batteries, fuses and bulbs;
- (h) Cosmetic damage; or
- (i) If any Kodak Luma 500 FHD Ultra Smart Pico Projector serial number has been removed or defaced.

This Warranty is valid only in the country where the consumer purchased the Product, and only applies to Products purchased and serviced in that country.

The Company does not warrant that the operation of the Product will be uninterrupted or error-free. The Company is not responsible for damage arising from your failure to follow instructions relating to its use.

NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY PROVIDES THE PRODUCT "AS-IS" AND "AS-AVAILABLE" FOR YOUR CONVENIENCE AND THE COMPANY AND ITS LICENSORS AND SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE COMPANY DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT, OR THAT THE COMPANY WILL CONTINUE TO OFFER OR MAKE AVAILABLE THE PRODUCT FOR ANY PARTICULAR LENGTH OF TIME. THE COMPANY FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

YOU USE THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND THE COMPANY DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES RESULTING FROM YOUR USE OF THE PRODUCT.

NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM THE COMPANY OR THROUGH ITS AUTHORIZED SERVICE PROVIDERS SHALL CREATE ANY WARRANTY.

IN NO EVENT WILL THE COMPANY'S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE EXCEED THE FEES ACTUALLY PAID BY YOU TO THE COMPANY OR ANY OF ITS AUTHORIZED RESELLERS FOR THE PRODUCT AT ISSUE IN THE LAST YEAR FROM YOUR PURCHASE. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE



INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE COMPANY DISCLAIMS ALL LIABILITY OF ANY KIND OF ITS LICENSORS AND SUPPLIERS. IN NO EVENT WILL THE COMPANY OR ITS LICENSORS, MANUFACTURERS AND SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA, OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT.

Nothing in these terms shall attempt to exclude liability that cannot be excluded under applicable law. Some countries, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so certain limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

Kodak does NOT manufacture this Product or provide any Warranty or support.



# Google TV

**[www.kodakprojectors.caglobal.com](http://www.kodakprojectors.caglobal.com)**

The Kodak trademark, logo, and trade dress are used under license from Kodak.

Google, YouTube, Google Home, Google Cast and other marks are trademarks of Google LLC.

Netflix is a registered trademark of Netflix, Inc.

Prime Video is a registered trademark of Amazon Technologies.

APPLE, AIRPRINT, IPOD, IPHONE, IPAD, APP STORE, MAC, MACINTOSH, and OS X are trademarks of APPLE INC. in the U.S. and other countries.

Bluetooth is a trademark of Bluetooth SIG, Inc. USA.

DLP® and the DLP logo are registered trademarks of Texas Instruments.

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and/or other countries.

Wi-Fi is a trademark of Wi-Fi Alliance in the U.S. and other countries.

Windows is a trademark of Microsoft Corporation and other countries.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Distributed by: C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837, USA

© 2024 C&A IP Holdings, LLC. All Rights Reserved. Made in China.