

**STRONG**



## **LEAP-S3 PRO**

Premium 4K UHD Streaming TV Box



Ultra HD



Sub rezerva modificărilor

User Manual

# SERVICE CENTER

AT	✉ ☎	<b>support_at@strong-eu.com</b> 0820 400 150 (€ 0,12/Min. österr. Festnetz)	HU	✉ ☎	<b>support_hu@strong-eu.com</b> +36 1 445 26 10
BG	✉ ☎	<b>support_bg@strong-eu.com</b> +359 32 634451	IT	✉	<b>support_it@strong-eu.com</b>
CZ	✉ ☎	<b>support_cz@strong-eu.com</b> 844 44 44 90	NL	✉	<b>support_nl@strong-eu.com</b>
DE	✉ ☎	<b>support_de@strong-eu.com</b> 0800 7788 787 (Gebührenfrei)	PL	✉ ☎	<b>support_pl@strong-eu.com</b> 801 702 017
DK	✉	<b>support_dk@strong-eu.com</b>	PT	✉ ☎	<b>support_pt@strong-eu.com</b> +351 2 100 06 125
ES	✉ ☎	<b>support_es@strong-eu.com</b> +34 91 119 61 76	SK	✉ ☎	<b>support_sk@strong-eu.com</b> 0850 15 05 50
FR	✉	<b>support_fr@strong-eu.com</b>	SL	☎	+386 1 828 08 58
HR	☎	+385 1 344 57 66	UA	✉ ☎	<b>support_ua@strong-eu.com</b> +380 (44) 238 61 50

Supplied by STRONG Austria  
 Represented by STRONG Ges.m.b.H.  
 Teinfaltstraße 8/4.Stock  
 A-1010 Vienna, Austria  
 Email: support\_at@strong-eu.com

## LICENSES

This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to **Dolby Laboratories**. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2009 by Dolby Laboratories. All rights reserved.

## SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, STRONG declares that the device LEAP-S3 PRO is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://eu.strong-eu.com/downloads/>

Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change. Google, Google Play, YouTube, Android TV and other marks are trademarks of Google LLC. Wi-Fi, WPA2, WPA are registered trademarks of Wi-Fi Alliance®. Skype is a trade mark of Skype and STRONG is not affiliated, sponsored, authorized or otherwise associated by/with the Skype group of companies. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories. The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. All other product names are trademarks or registered trademarks of their respective owners.

© STRONG 2025. All rights reserved.

## TABLE DES MATIÈRES

<b>1. INTRODUCTION</b>	<b>4</b>
1.1. Safety Instructions	4
1.2. Storage	5
1.3. Package content	5
<b>2. TV BOX PANELS</b>	<b>5</b>
2.1 Front Panel	5
2.2 Side Panel	5
2.3 Rear Panel	6
2.4 Remote control	6
2.5 Installing the batteries	7
<b>3. CONNECTION GUIDE</b>	<b>8</b>
<b>4. SETTING UP YOUR DEVICE</b>	<b>9</b>
Step 1: Language	9
Step 2: Location Settings	10
Step 3: Set up with the Google Home App	10
Step 4: Wi-Fi	10
Step 5: Google Account	10
Step 6: Terms of Service & Privacy Policy	11
Step 7: Diagnostic Report Settings	11
Step 8: Meet your Google Assistant	11
Step 9: Choose your subscriptions	11
Step 10: Setup remote buttons	11
Step 11: Personal settings of your Google TV	11
<b>5. SETTINGS</b>	<b>12</b>
Display and sound	12
Network and Internet	12
Adding Accounts	12
Privacy	12
Apps	12
Bluetooth Pairing	13
Remove a Bluetooth Device	13
System	13
About	13
Factory Reset	13
Date and Time	13
Language	13
Keyboard	13
Storage	13
Power and energy	14
Cast	14
<b>6. DOWNLOADING APPS</b>	<b>14</b>

<b>7. GOOGLE CAST</b>	<b>14</b>
Cast from a Mobile Device	14
Cast from Google Chrome	14
<b>8. GOOGLE ASSISTANT</b>	<b>14</b>
Say it to Play it.	14
Movies & TV shows:	14
Control	14
Play music, news, or podcasts	14
Ask Google	15
<b>9. SIMPLE TROUBLESHOOTING</b>	<b>15</b>
<b>10. TECHNICAL SPECIFICATIONS</b>	<b>15</b>

## 1. INTRODUCTION

Thank you for choosing the Premium 4K UHD Streaming TV Box supplied by STRONG. It has been produced with the latest new technology and offers extensive entertainment and great versatility. We wish you many hours of new great experiences exploring the Android world!

### 1.1. Safety Instructions

Read all the instructions before operating the device. Keep these instructions well for later use.

Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc.).

- Please refer to the information on the product enclosure for electrical and safety information before installing or operating the apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspaper, table-cloths, curtains, etc.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- ⚠ This mark indicates a risk of electric shock.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent types.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Listening to music at high volume levels and for extended durations can damage one's hearing.
- In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The mains plug or appliance coupler is used as disconnect device, it shall remain readily operable. When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges or similar which can cause abrasion of the power cord set. When put into use again, please make sure the power cord is not damaged. The absence of a light indication on the apparatus does not mean that it is fully disconnected from the mains. To disconnect the apparatus completely, the mains plug must be pulled out.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 🔪 To prevent the spread of fire, always keep candles or other open flames away from this product.
- Equipment with this symbol is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

#### Precautions

Never try to open the device. It is dangerous to touch the inside of the device due to high voltages and possible electrical hazards. Opening the device will void the warranty of the product. Refer all maintenance or servicing to suitably qualified personnel. When you are connecting cables, be sure that the device is disconnected from the mains supply voltage. Wait a few seconds after switching off the device before you move the device or disconnect any equipment.

It is a necessity that you only use approved extension and compatible wiring that is suitable for the electrical power consumption of the installed equipment. Please ensure that the electrical power supply corresponds with the voltage on the electrical identification plate at the back of the device.

⚠ Risk of explosion if the battery is replaced by an incorrect type.


Disposing of a battery into the fire or a hot oven, or mechanically crushing or cutting a battery can result in an explosion. Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

#### Operating Environment

- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not use the set near damp and cold areas, protect the set from overheating.
- Keep away from direct sunlight.
- Do not use the set near dusty place.
- Do not place candles near the opening area, to avoid flammable foreign material from entering the device.

## WEEE Directive

 Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

## 1.2. Storage

Your device has been carefully checked and packed before shipping. When unpacking it, make sure that all the parts are included and keep the packaging away from children. We recommend that you keep the carton during the warranty period, to keep your device perfectly protected in the event of repair or warranty.

### Equipment Set-up

Please follow the instructions below:

This user manual provides complete instructions for installing and using this product. The symbols will serve as follows:

<b>WARNING:</b>	Indicates warning information.
<b>NOTE:</b>	Indicates any other additional important or helpful information.
<b>MENU</b>	Represents a button on the remote control or the product.
<i>Move to</i>	Represents a menu item within a window.

## 1.3. Package content

- 1x LEAP-S3 PRO box
- 1x Backlight Voice Enabled Remote
- 1x Power USB Adaptor 12V / 1A
- 2x AAA Batteries
- 1x Installation instructions
- 1x HDMI cable version 2.1
- 1x Safety and Warranty Instructions

<b>WARNING:</b>	The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries. If rechargeable accumulators instead of batteries are going to be used (e.g. NiMH), we recommend using types with low self-discharge to ensure long time operation of your remote control.
-----------------	---

## 2. TV BOX PANELS

### 2.1 Front Panel

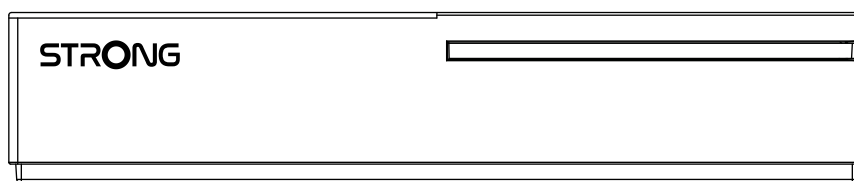 


Fig. 1

On/Off Indicator: Green : Box On / Red : Box on Standby

### 2.2 Side Panel


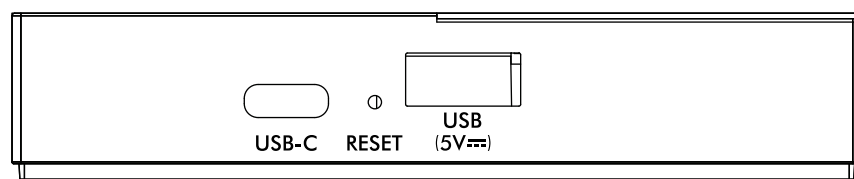 


Fig. 2

- |                 |  |
|-----------------|--|
| 1. USB-C Port   | To connect a phone                         |
| 2. Reset Button | To reset software back to factory settings |
| 3. USB-A port   | To connect a USB Key                       |

## 2.3 Rear Panel

 
Fig. 3

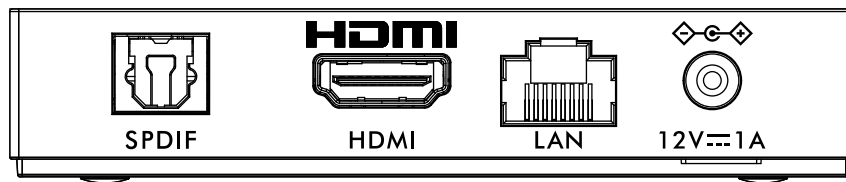

- |                        |  |
|------------------------|--|
| 1. S/PDIF (optical)    | To connect to a digital or home cinema audio amplifier.                                  |
| 2. HDMI                | To connect your receiver with your TV set or Dolby Digital amplifier using a HDMI cable. |
| 3. LAN / ETHERNET RJ45 | Connect to your Internet router to access the internet/apps.                             |
| 4. 12 V Adapter entree | To connect the original included 12Volt power adaptor of 1 Ampere.                       |




## 2.4 Remote control

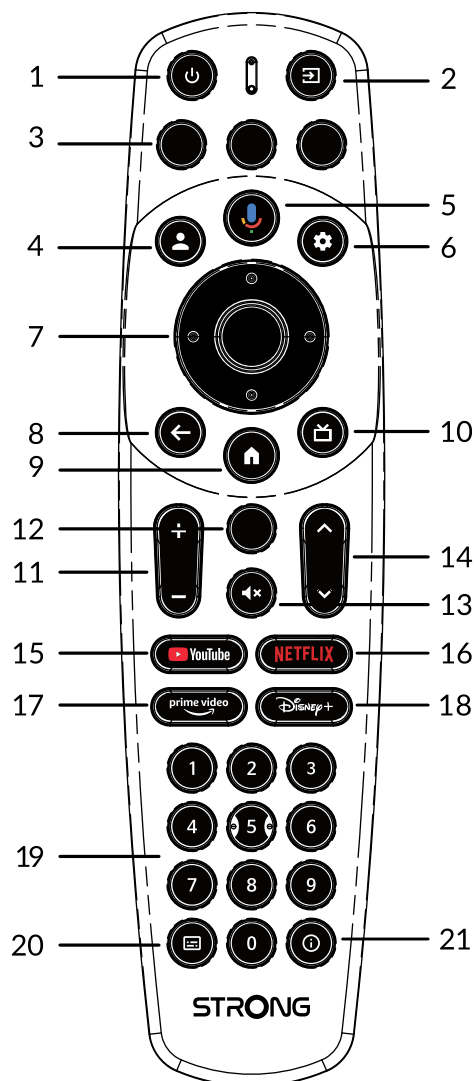 Fig. 4



- |    |   |
|----|---|
| 1. | Press to turn the TV/ Box to On, Standby or deep Standby. |
| 2. | Select TV inputs after setup remote button configuration  |
| 3. | No function   |
| 4. | Call account menu to select between accounts              |
| 5. | Press to activate the voice control function*.            |
| 6. | Direct access to settings menu.                           |
| 7. | Navigate the menu. Confirm the selection.                 |
| 8. | Press to Exit. In menu: step back to previous menu.       |



- |   |  |
|---|--|
| 9.   | Enter the home desktop.                      |
| 10.  | Press to access the TV settings.             |
| 11. VOL +/-   | Adjust the volume up or down.                |
| 12. ●   | No Function                                  |
| 13.  | Press to mute or restore the volume.         |
| 14. ▲▼  | Change programs up or down.                  |
| 15. YouTube   | Press for direct access to YouTube.          |
| 16. NETFLIX   | Press for direct access to Netflix**.        |
| 17. prime video   | Press for direct access to prime video***.   |
| 18. Disney+   | Press for direct access to Disney+****.      |
| 19. 0 to 9  | Choose channel directly.                     |
| 20. SUBTITLES   | Subtitles /Audio selection                   |
| 21. INFO  | Display information about the current source |

\*Voice control and some other functions could work only when this RCU paired with your TV.


\*\* Membership is not included. Netflix is available in selected countries. Streaming Netflix requires to set up an account. Broadband Internet required. See [www.netflix.com/TermsOfUse](http://www.netflix.com/TermsOfUse) for details.

\*\*\* Membership is not included. Prime is available in selected countries. Streaming prime video requires to set up an account. Broadband Internet required. See [www.primevideo.com](http://www.primevideo.com) for details.

\*\*\*\* Membership is not included. Disney+ is available in selected countries. Streaming Disney+ requires to set up an account. Broadband Internet required. See [www.disneyplus.com](http://www.disneyplus.com) for details.

## 2.5 Installing the batteries

 Fig. 5

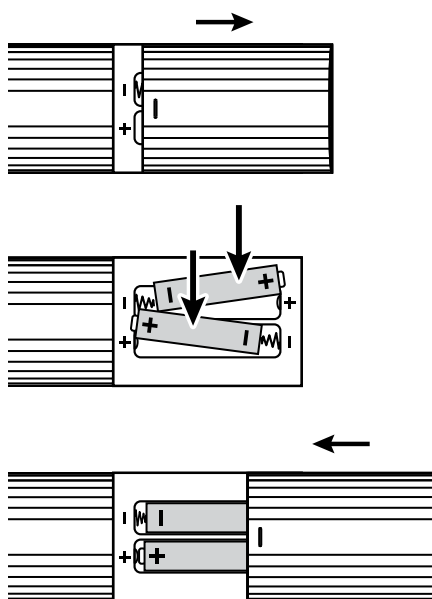

Open the cover on the remote control and insert 2x AAA batteries into the compartment. The correct position of batteries polar diagram is shown inside the batteries compartment.

1. Open the cover.
2. Insert the batteries.
3. Close the lid.

### WARNING:


The batteries should not be recharged, disassembled, electrically short-circuited, be mixed or used with other types of batteries.

## 3. CONNECTION GUIDE

Refer to the diagram below for connecting your LEAP-S3 PRO box to the HDMI input of TV.

**NOTE:** Before getting started, please turn off all devices to be connected.

 **Fig. 6**

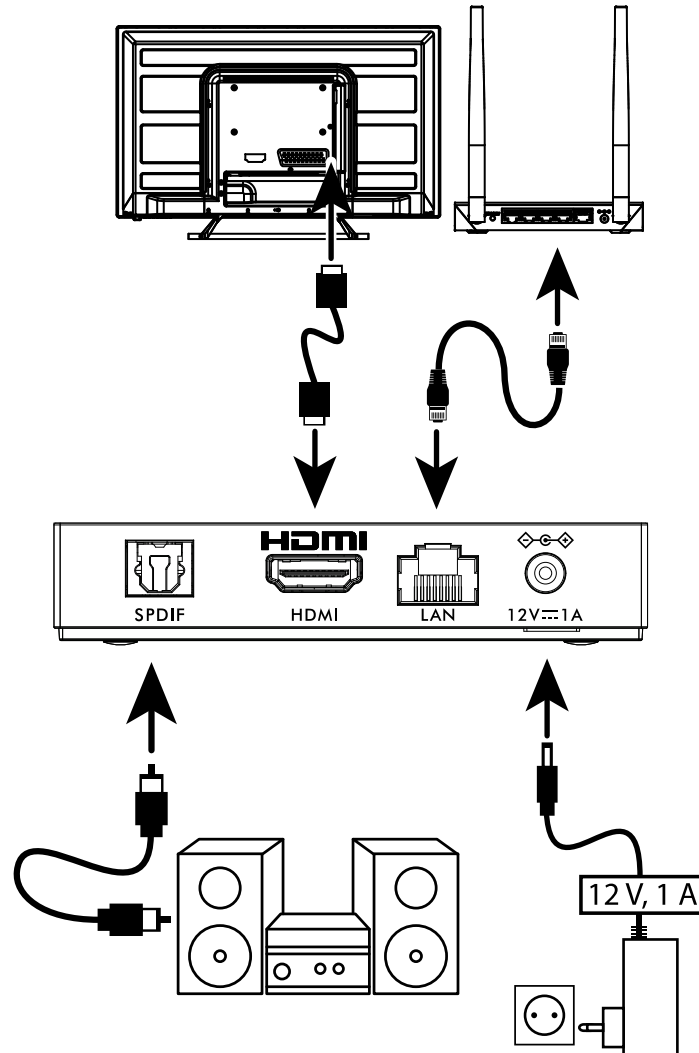

**NOTE:** The LEAP-S3 PRO box also supports Wi-Fi 2.4GHz and 5GHz. To connect, go to Settings -> Network.


- Connect the LEAP-S3 PRO box to your television via the HDMI Cable. Advice: use (the included) type 2.1 as this is supporting UHD, HDR, Dolby Vision resolutions.
- Using an Ethernet Cable, connect the LAN Port of the LEAP-S3 PRO box to the LAN Port of your router or home broadband network.
- Connect the LEAP-S3 PRO box to power using the power adapter provided. You can then power on your device and begin.

**NOTE:** Before turning on your device, please switch the signal input of the TV to the correct source

## 4. SETTING UP YOUR DEVICE

You may turn on your LEAP-S3 PRO box after properly connecting all hardware.  
To be able to use Google Assistant on your remote, you must first pair your Bluetooth Remote to your LEAP-S3 PRO Box. Please, follow the pairing instructions on the screen.

 
**Fig. 6**

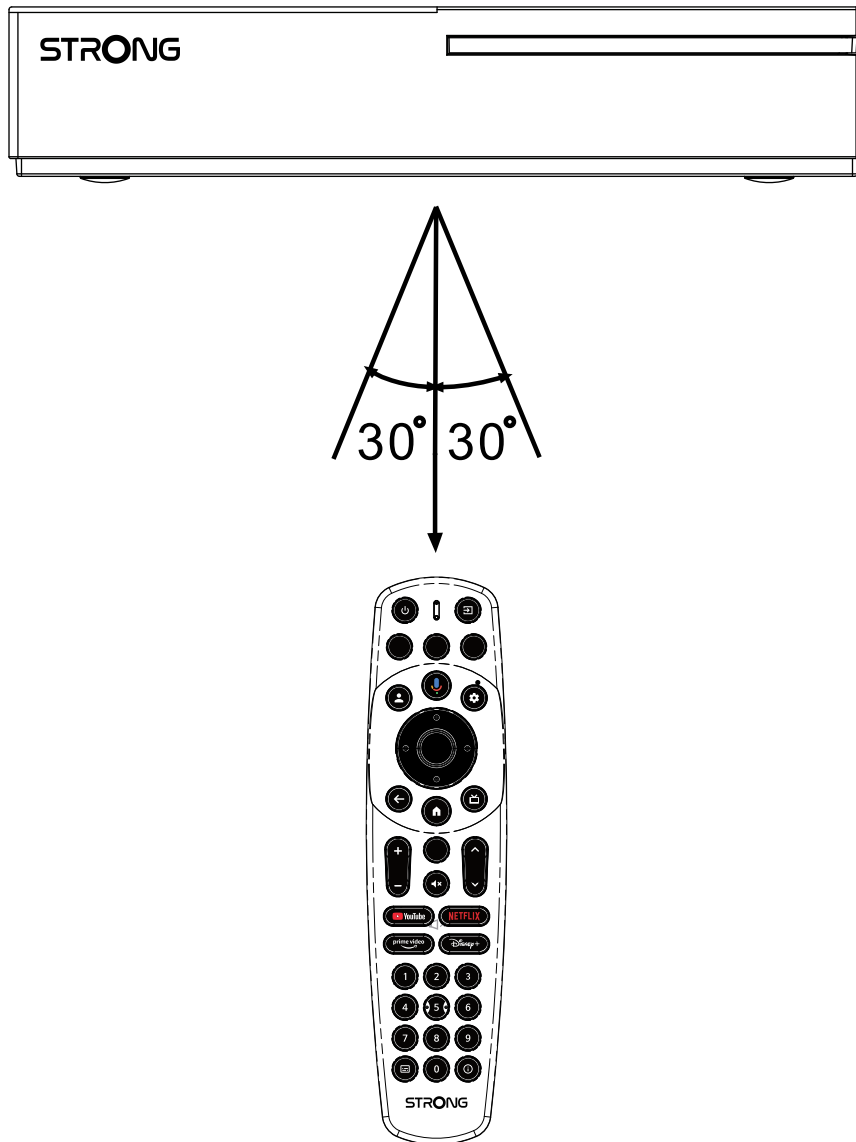

Press **←** and **🏠** together for 5 seconds. The LED will start blinking to start the pairing process. When successfully paired, it automatically switches to the next step, the Welcome Page.

### Step 1: Language

 Select your preferred language on the Welcome Page.

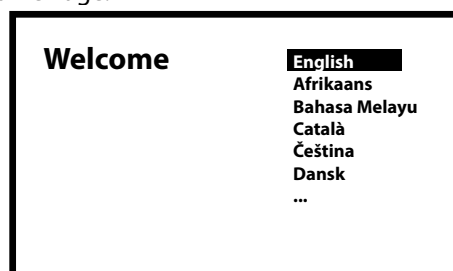


## Step 2: Location Settings

Select the region or country where you are using this LEAP-S3 PRO Box.




## Step 3: Set up with the Google Home App

 Set up the LEAP-S3 PRO Box by downloading / opening the Google Home app on your phone. Please, scan the QR code on your phone and follow the instructions to start this Google home. Alternative, Start the set up on TV screen to type manually way by pressing down button to start with. Please, follow the instructions on your TV screen.

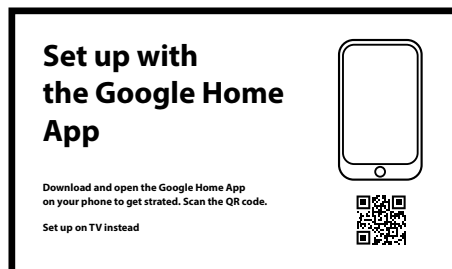


## Step 4: Wi-Fi

 If you are not connected to the internet via an RJ45 cable, the Wi-Fi setup will appear. Select here to connect to your Wi-Fi Network.

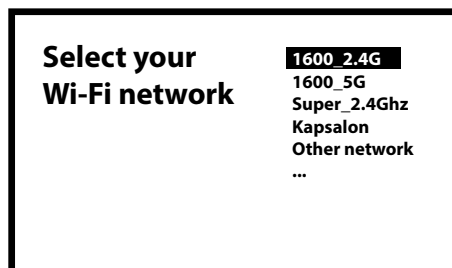


## Step 5: Google Account

 Sign in with your Google Account and Password.

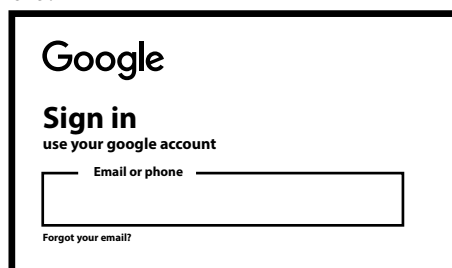

## Step 6: Terms of Service & Privacy Policy

 Read and accept the Terms of Services & Privacy Policy.

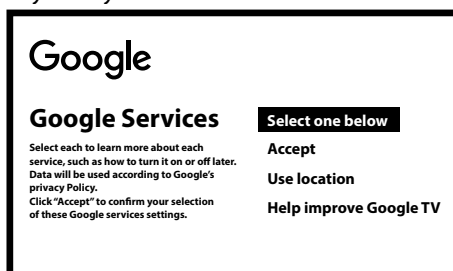


## Step 7: Diagnostic Report Settings

Select whether to allow Google to estimate your location using Wi-Fi.  
Choose whether to allow your LEAP-S3 PRO Box to send automatic diagnostic and usage data to Google.  
To proceed, select Accept and confirm by pressing OK.

## Step 8: Meet your Google Assistant

 Activate the Google Assistant feature for it to work with your remote.  
Choose whether you would like to use Assistant to search across all your TV applications.

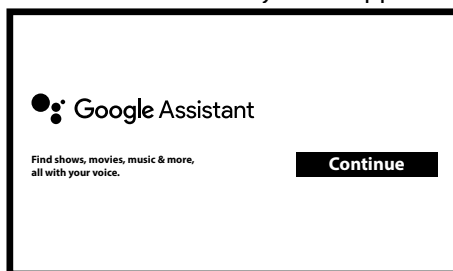

## Step 9: Choose your subscriptions

 
Select or de-select advised applications, which will be used on home screen for recommendations.  
Some apps are forced and cannot de-selected.  
Select Confirm to proceed

## Step 10: Setup remote buttons

If you like to set up some button functions from the connected device such as TV, Source, Volume.  
Select *Set up remote* and follow the instructions on screen.  
As not all TV models are supported, we advise to set up this in later stage when you have more time.  
Please, select *Not now* as you can reach this setup again through the settings menu.

## Step 11: Personal settings of your Google TV


In this final step you can select to display photos from your Google Photo albums, set up multiple profiles and create a profile for children.

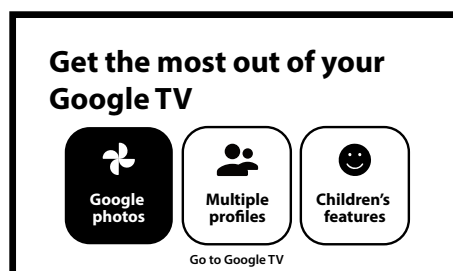

Select *Go to Google Tv* to start exploring your new LEAP-S3 PRO box.

## 5. SETTINGS

 Press the settings button to open the Google TV menu. This menu allows you to directly access important items such as Wi-Fi, Bluetooth, accessibility, and notifications. Select "All settings" and press OK to view device information, add or remove accounts, and modify system settings.

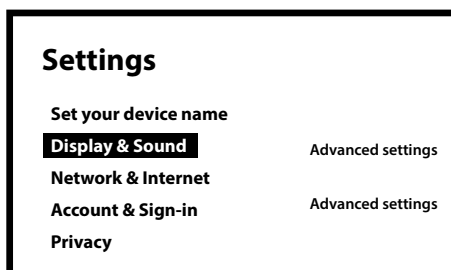

### Display and sound

Select *Video settings* for selection of Display mode to select resolution, HDR output Mode and Dolby Vision selection.

Select *CEC-Inputs* for setup connections and adjustments through CEC (Consumer Electronics Control).

Select *Text scaling* for text display size on screen.

Select *Match content frame rate* to adjust this with playback through some applications.

Select *Advance display settings* for Game mode with belonging formats

 
Select *AISR* for smooth scrolling through pop-up highlight pictures in menu.

Select *Audio* to set up HDMI or S/PDIF audio output and Dolby Audio special settings

### Network and Internet

Under Network Settings, select and enable Wi-Fi to connect to Wi-Fi network.

Once the device scans and lists nearby Wi-Fi networks, select the appropriate network name, if required put in the password and select Connect.

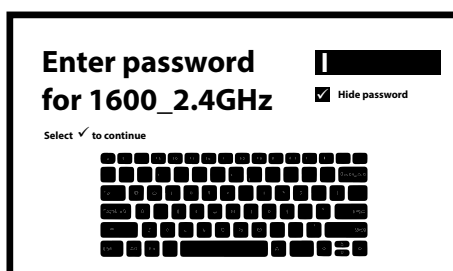


If you prefer to use wired RJ45 connection, disabled Wi-Fi.

Under IP settings you can find your wired settings to check or set up DHCP or Static IP address.

### Adding Accounts

 For new Google users: sign up for a new Google account using the TV for easier login and payment security. Add an account or switch accounts under Accounts in the Settings Menu.

Here, parents can create a child profile to personalize a safe space for their kids to access content they love, all under your control.

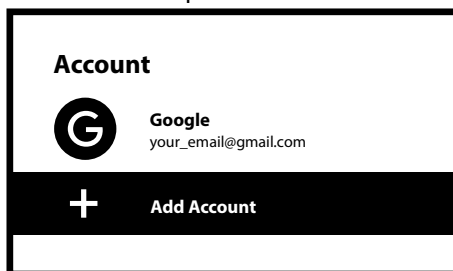

### Privacy

Select which connected devices or apps like Google assistant may use access or permission. Set up Payment and purchases, Manage App updates and check Memory space.

### Apps

Select to find the installed Apps, see permissions access, versions of applications and to remove apps from your TV box.

## Bluetooth Pairing

Select Settings in the Menu Launcher, click Remote & Accessories, then select the device to be paired. Make sure that the device you want to pair with is in pairing mode. In this menu you can setup some remote buttons to control Volume, Power, Input sources on TV or Digital Home amplifiers.

## Remove a Bluetooth Device

Select Settings from the Menu Launcher.

From the Remote & Accessories menu, select the Bluetooth device you want to remove.

 
Click "Forget" to remove this device.

## System

Select system to find information of software and android version, to check for system update and if you like to do full factory reset to remove all installed apps and accounts. As well to select menu language, date and time location and settings of power and energy modes.

## About

You can check information about your device by clicking on ABOUT in the System Menu. This menu will show you the model of your device, version, firmware version and more. You can also update your system by clicking on System update from this menu.

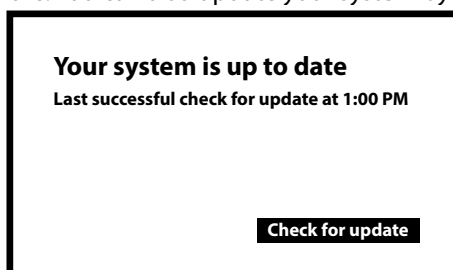


## Factory Reset

Under Settings, System > About > Reset

Click Factory data reset to erase everything back to factory settings.

Once this option has been selected, all manually installed apps and user data information will be deleted including your Google accounts from LEAP-S3 PRO box.

 **Alternative:** On the left panel of the LEAP-S3 PRO box, between the USB ports, there is a small hole containing the RESET button. Press this button for 10 seconds while on the home screen to reset the device back to factory settings.

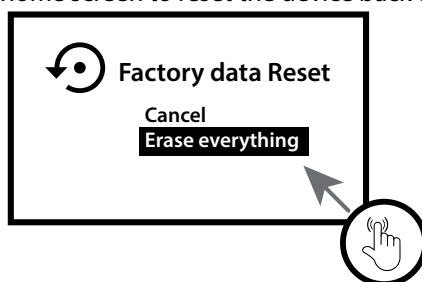

## Date and Time

Under Settings > System > select Date and Time to change Time zone and to use 24-hour format.

## Language

Under Settings > System > select Language to change the language previously set.

## Keyboard

Under Settings > System > to select or change Keyboard type and the belonging language type.

## Storage

Under Settings > System > to check used and available memory.

## Power and energy

Select or change Standby mode definition to Sleep or total Shutdown.

Select the time when the box is inactive to start with photo gallery in Ambient mode.

Select Auto standby to select time to go automatically when the remote is not used.

 
## Cast

Under Settings > System > Cast select if you want to show notification on all Android devices connected to your Wi-Fi network and to allow to let them control.

## 6. DOWNLOADING APPS

Apps are available for download on the Google Play Store. Select in the upper part of Home screen APPS.

Select the search bar "Search for apps and games" and type name or press microphone and tell name.

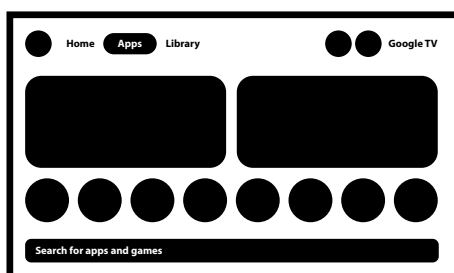

## 7. GOOGLE CAST

### Cast from a Mobile Device

Certain apps allow you to cast onto your TV. To cast, simply follow the following steps:

Open a Google cast compatible app on your mobile device.

Navigate to the screen you wish to cast.

### Cast from Google Chrome

This device has Google Chromecast built-in. To cast from Google Chrome, click the Settings icon : located on the top right corner of the browser, then click "Cast".

## 8. GOOGLE ASSISTANT

### Say it to Play it

Ask it to play your favorite show, video, or music or find the latest blockbuster to enjoy.

### Movies & TV shows:

Play Emily in Paris on Netflix. Video clips: Play cat videos. Apps: Open YouTube. Search: Find comedy shows.

Info: Tell me about the new Dune movie.

### Control

Playback: Pause. Stop. Resume Volume: Louder. Softer. Power: Turn off.

### Play music, news, or podcasts

Music: Play music by Sia. (Learn how to choose your music service provider.) News: Play the news. What's the latest news from BBC?



## Ask Google

Sports: How did the Patriots do? When is the next Warriors game? Calculations: What's 20% of 80? Dictionary: What does "ludic" mean?

Find answers: How far away is the moon? How do you remove stains in a rug? Unit conversions: How many teaspoons in a cup? Speak into the microphone of your Voice Search remote.

Learn more about the Google Assistant on [assistant.google.com](https://assistant.google.com) or say, "What can you do?" Just ask questions like: "How is the weather in Paris?"

To get started, press the Google Assistant button on your remote.

**NOTE:** To be able to use Google Assistant on your remote, must remote be paired to your LEAP-S3 PRO box.

## 9. SIMPLE TROUBLESHOOTING

Issue	Possible Reason	Solution
No LED after power on	The power adapter is not properly connected.	Make Sure the device is connected to the power.
No Sound	<ul style="list-style-type: none"> <li>The Tv is on Mute or volume is low.</li> <li>The device is on Mute or the volume is too low.</li> </ul>	Press the mute button to restore the sound and increase the volume.
Failed to connect to network	Wi-Fi is turned off or the signal is too weak.	Restart the Wi-Fi or adjust the position of the device closer to the router.
Remote Control Failure	<ul style="list-style-type: none"> <li>Remote control batteries are low in power.</li> <li>Lost pairing</li> </ul>	Replace batteries. Switch main power OFF/ON and pair remote with BACK & HOME button press 5 seconds. Wait until pair screen appears, pair.
No Picture on Screen	Wrong TV HDMI input.	Make sure that correct HDMI is selected as your TV input. Check if you not are using old HDMI cable.
Voice search on remote is not working	Remote is not paired to the Google TV Box	See the Pairing Bluetooth Device section in this guide
No Audio	Audio Settings not configured correctly for your TV	Settings> Display & Sound > Advanced sound settings

## 10. TECHNICAL SPECIFICATIONS

### Video decoder

Video resolution: 480i, 480p, 576i, 576p, 720p, 1080i, 1080p24, 1080p30, 1080p60 4Kx2Kp30, 4Kx2Kp60, HEVC H.265, MPEG-4,MP@ML, MP@HL profiles, AV1, VC-1/VP8/VP9, HDR10+, HDR10, HLG, Dolby Vision

### Audio decoder

Audio decoding: 32KHz to 192KHz sample rates, MPEG Audio Layers 1, 2 and 3, MS12, Dolby Digital Plus\*, Dolby Atmos\*

\* Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

### System & Memory

Android Version: 12  
 CPU: Amlogic RTD1325 Quad A55 20400 DMIPS 32K I/D cache 512KB L2 cache  
 GPU: ARM G57 OpenGL ES 3.2 Graphics engine  
 SDRAM: 4GB DDR4  
 Flash: eMMC: 32 GB

## Connectors

HDMI	Version 2.1
Ethernet	RJ 45, 10/100
2x USB	Type A, 500Ma Type C, 500Ma
S/PDIF	Optical
DC IN	12 V, 1 A

## General data

Wi-Fi:	IEEE 802.11b/g/n, 2.4 GHz IEEE 802.11a/n/ac/ax, 5 GHz
Bluetooth:	5.0 (LE 4.2)
Power supply:	100 - 240 V AC, 50/60 Hz
Input voltage:	DC 12 V, 1 A
Power consumption working:	4 W
Operating temperature range:	0 ~ +40 °C
Storage temperature:	-10 ~ +70 °C
Dimensions (W x D x H) in mm:	96 x 96 x 20
Weight:	158 g

## Data Protection:

Please be aware that STRONG, its manufacturing partners, the application providers and the providers of the services may collect and use technical data and related information, including but not limited to technical information about this device, system and application software and peripherals. STRONG, its manufacturing partners, the application providers and the providers of the services may use such information to improve its products or to provide services or technologies to you, as long as it is in a form that does not personally identify you. Additionally, please keep in mind that some services provided - already in the device or installed by you - may request a registration for which you have to provide personal data. Besides that, please be aware that some services which are not pre-installed but can be installed may collect personal data even without providing additional warnings and that STRONG cannot be held liable for a possible breach of data protection by services not pre-installed.

\* Availability of apps depending on the country. STRONG cannot be held liable for services by third parties. Offers by third parties may be changed or removed at any time, may not be available in all regions and may require a separate subscription.