 


FRONT

3.15"
80.01mm



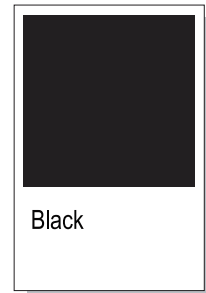

PANTONE 285 C



Black


[BACK](#)

3.15"
80.01mm

QUICK START GUIDE

CS110K4










US Compatible Only*

*Google TV services including apps, content, and/or features are not supported on this device outside the U.S. and Puerto Rico.

116452505_EN_241105

WHAT'S INCLUDED

| Part | Description | Picture |
|------|----------------------|---|
| 1 | Streaming Device x1 |  |
| 2 | Quick Start Guide x1 |  |
| 3 | Remote Control x1 |  |
| 4 | Batteries x2 |  |
| 5 | HDMI Cable x1 |  |
| 6 | Power Adapter x1 |  |
| 7 | Adhesive Tape x1 |  |

SAFETY INFORMATION

⚠ WARNING

- No parts should be repaired by users.
- Place the device on a flat, firm and stable surface. Do not put it on a carpet or rug.
- Protect the device from high temperatures, humidity, water and dust.
- Do not mix old and new batteries and do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cd, ni-mh, etc.) batteries.
- Do not place any objects near your device that may damage it (e.g. liquid-filled objects or candles).
- Place the device in a well-ventilated location to prevent the accumulation of internal heat.
- Presence of live parts inside the device! Do not open. Risk of electric shock!

SAFETY INFORMATION

⚠ CAUTION

Battery Replacement

 
Risks of explosion if the battery is replaced by an incorrect type:

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types)
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas

The Environment for Device

- Appropriate Operating Temperature: 32°F to 104°F.
- Appropriate Operating Humidity: 5% ~ 85% Non-condensing.

REMOTE CONTROL

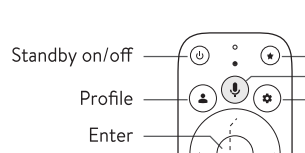

Standby on/off

Profile

Enter

Up/Down

Back

Free TV

Volume Up

Volume Down

Quick Launch Buttons

Customizable Google Assistant Dashboard


Left/Right

Live TV Guide Home

Mute

Channel Up


Channel Down




Remote Label

DETAILS

1. Front Panel



2. Back Panel




| Part | Item | Description |
|------|---------------|--|
| 1 | LED Indicator | Red: Standby State White: Active State |
| 2 | Reset | Reset and Re-pair Remote: Follow the instructions on the remote label |
| 3 | HDMI | Connect an HDMI cable from the streaming device to your high-definition TV |
| 4 | USB(Type-C) | Connect the Power Adapter to power on the streaming device |

SETUP

1. Start Up TV

 
Turn on your TV before using the onn 4k Plus Streaming Device.

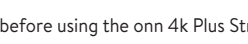

Power on

2. Set Input Source Of TV

 
After your TV is turned on, go to the Inputs page where you can switch the input source. Select HDMI Input, e.g. HDMI1.

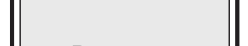

SETUP

3. Connection

 Connect the streaming device to TV with an HDMI cable. Check what HDMI Input you are connecting to, e.g. HDMI1. After the device is powered on, the LED Indicator changes from red to white.

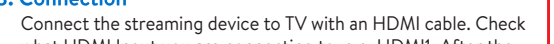


4. Follow On-Screen Setup


Follow the on-screen instructions to set up your Google TV™.

SETUP

4.1 Remote Pairing

 Insert the 2 AAA batteries into the remote. Hold both **BACK** and **HOME** button on the remote until pairing is successful.

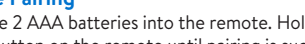
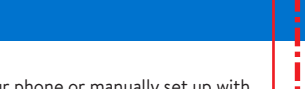 
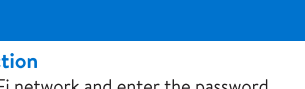 
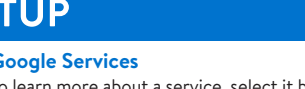 
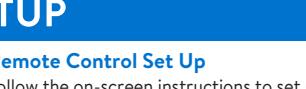 
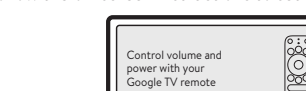 





386

We'd love to hear from you. Scan with your smartphone camera and let us know what you think.

720.0mm

| SETUP | | SETUP | | SETUP | | SETUP | | SETUP | | ADHESIVE TAPE | | TROUBLESHOOTING | | COMPLIANCE | | COMPLIANCE | | COMPLIANCE | | | |
|---|--|---|--|---|--|--|--|---|--|---|--|---|--|--|--|--|--|--|--|---|--|
| 4.2 Select language Follow the on-screen instructions to select your language and region.  | | 4.3 Select a way to Set Up You can quickly set up with your phone or manually set up with your TV remote.  | | 4.4 Wi-Fi Connection Select your Wi-Fi network and enter the password.  | | 4.6 Google Services To learn more about a service, select it below. Data will be used according to Google's Privacy Policy. Select accept to confirm.  | | 4.8 Remote Control Set Up Follow the on-screen instructions to set up your remote.  | | 4.9 Get the most out of your Google TV Your Google TV is ready to go, but there are a few optional features you can set up for a more personalized experience.  | |  | | ● No display after power on? <ul style="list-style-type: none">Confirm the HDMI cable is plugged in properly.Make sure your TV has not entered sleep mode. Press the power button on the remote control to wake up your TV. ● TV has images but no sound? <ul style="list-style-type: none">Make sure your TV is not in mute or low volume. ● Fail to connect to the network? <ul style="list-style-type: none">Make sure Wi-Fi is functional and your device has a strong enough signal from your router. ● Remote control failure? <ul style="list-style-type: none">Replace the battery of the remote control with a new one, and make sure it is placed in the correct polarity.Make sure the remote control is within the range of the device.Long press the reset button on streaming device for 5 seconds to reset the remote pair. ● Please use the original accessories to ensure safety and a better experience. | | FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. signal from your router. | | FCC Radiation Exposure Statement This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons. | | HDMI Statement The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. | |

720.0mm

- Cut line
- - - Fold line
- Copy safe area
- Outside bleed